


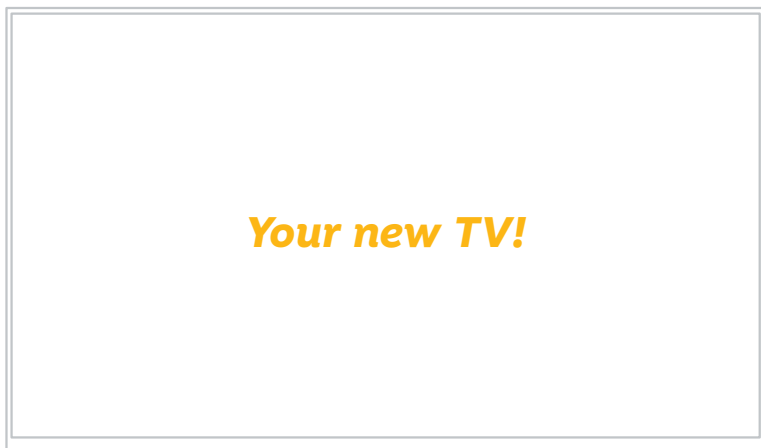


***QUICK START GUIDE***

***100" MINI-LED  
QLED 4K TV***

# WHAT'S INCLUDED




**Voice Remote**

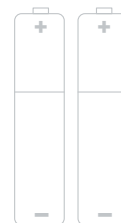


**2 AAA Remote Batteries**




**TV Stand**

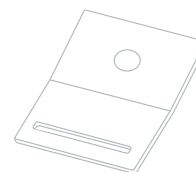

**Wall Plates**

 

**Stand Screws**

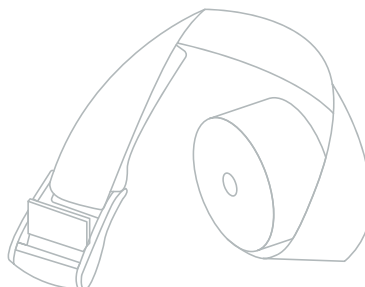

**Safety Straps x 2**




**Clamps**

# WHAT YOU'LL NEED (NOT INCLUDED)



**Screwdriver**  
Phillips head

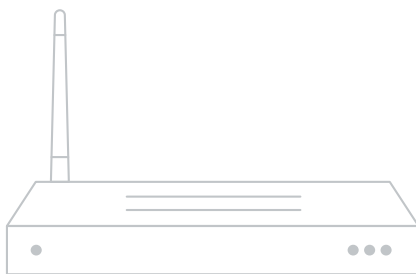

**Wireless Router**  
Needed for streaming



**Internet connection**  
Needed for streaming



**Smartphone, computer or tablet**  
Needed for setup

# CONNECT DEVICES TO YOUR TV

Check to ensure that you have selected the right cables for the ports and that they are connected securely (*cables and external devices not included*). Loose connections can affect your picture and audio quality.

## ANT



Connect an outdoor or indoor antenna.

## HDMI



Connect a Blu-ray or DVD player, gaming console, or other external devices to your TV. Highest quality audio/visual connection.

## OPTICAL



Connect an optical cable from an external digital audio system.

# CONNECT DEVICES TO YOUR TV

*(continued)*

## USB




Connect a USB device for browsing photos, music, or videos.

## LAN



Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.

# SETTING UP YOUR TV

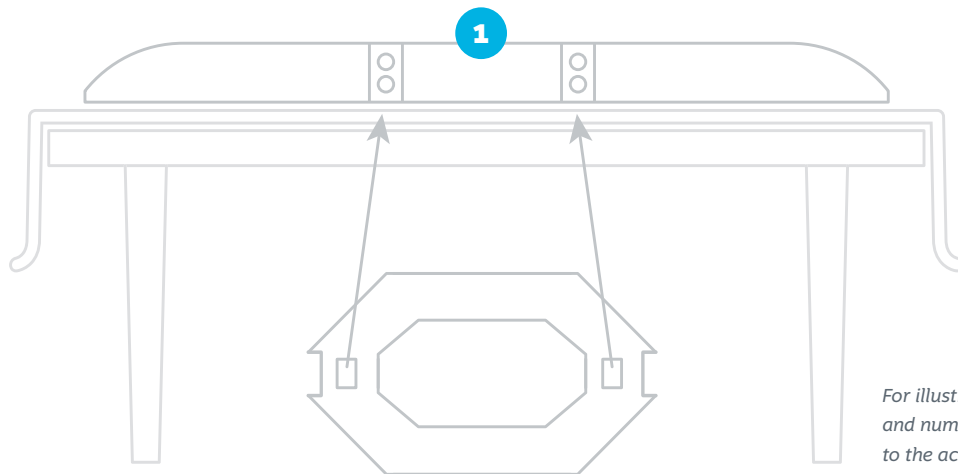

*For illustration purposes only. Actual product and number of screws may vary. Please refer to the actual product.*

**WARNING:** Your new TV is heavy (166lbs). Please always use at least two people to safely move and lift the TV.

## **Installing the stands**

Do not install the stand if you want to wall mount your TV. See instructions from wall mounting kit (sold separately).

**You will need:** Phillips screwdriver (not included)

- 1.** Use the box your TV came in to create a box table and place TV facedown on the box table by following the unboxing instructions.
- 2.** Use a Phillips screwdriver to attach the stand with the provided screws.
- 3.** Lift and place the TV upright on a stable, level surface with at least two people.

*To avoid damages, never carry your TV by holding or putting pressure onto the glass.*


# SETTING UP YOUR TV

*(continued)*

## Attaching Safety Straps

The safety straps provided with the TV are required for stabilization when using a TV stand.

1. Remove the mounting screws on the back of the TV.
2. Affix the safety buckle with the screws to the back of the TV.
3. Secure the straps to the table using the fastening clip and bolt. Adjust the height of the screw to securely install the clip to the table.
4. Fasten the anti-slip buckle as needed to secure the TV.

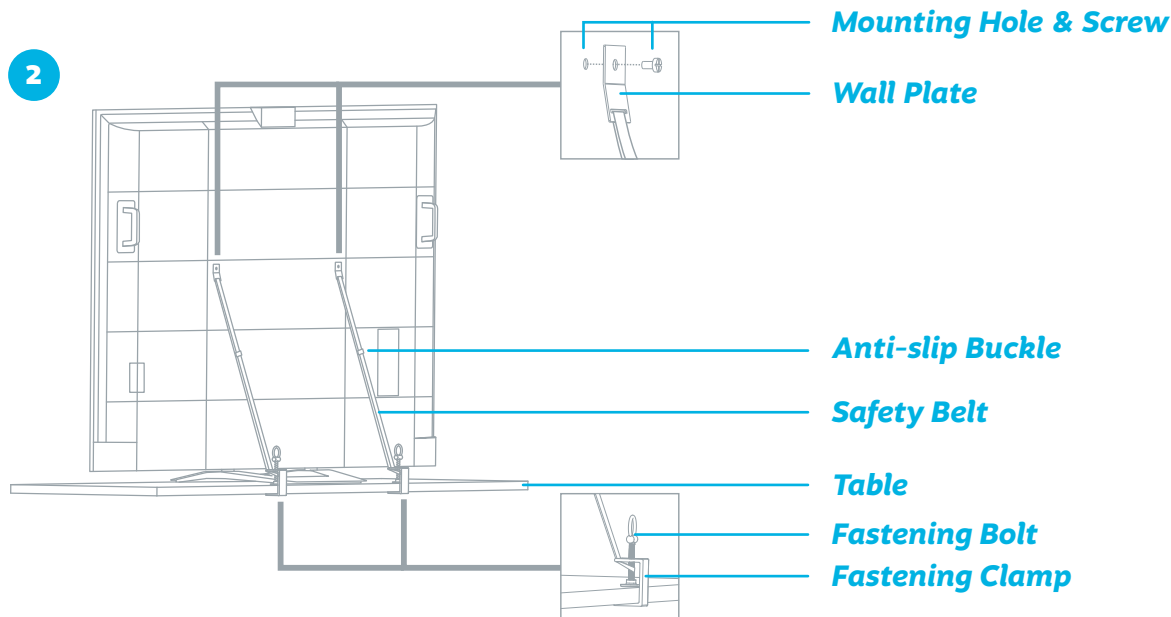



# SETTING UP YOUR TV

(continued)

## Setting up your remote

Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.


### Pairing your remote

When the TV prompts you to start pairing the remote, press and hold the  and  buttons on the remote until the light on the remote starts to pulse. Once complete, follow the on-screen instructions.

*Note: Internet connection is required in order to use Google Assistant.*

**TIP:** Always replace dead batteries with two brand new batteries from the same manufacturer. Never use damaged batteries.


If your remote gets warm/hot during use, discontinue use and contact customer support immediately.

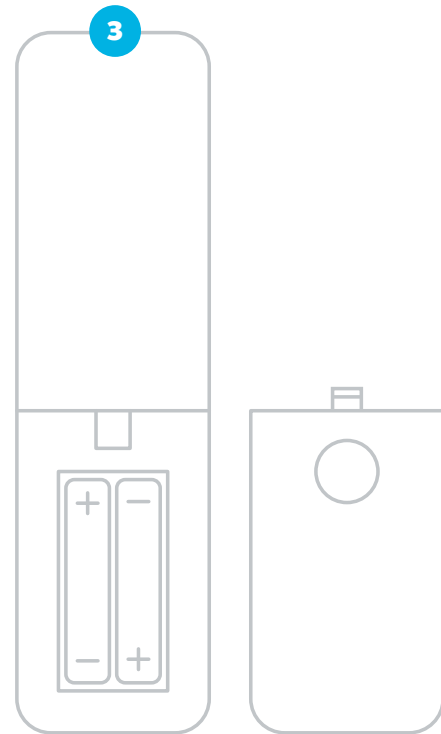



# SETTING UP YOUR TV

*(continued)*

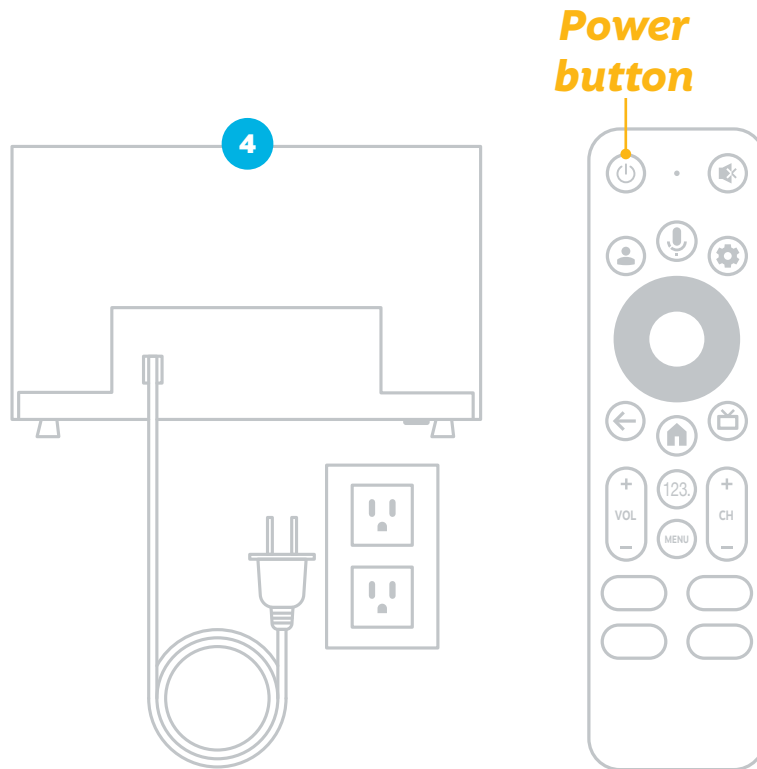


## **Plug in and turn on TV**

Plug your TV into the wall outlet and press the power button on your remote control. Your TV will display a launch screen followed by the first setup screen.

# SETTING UP YOUR TV

*(continued)*

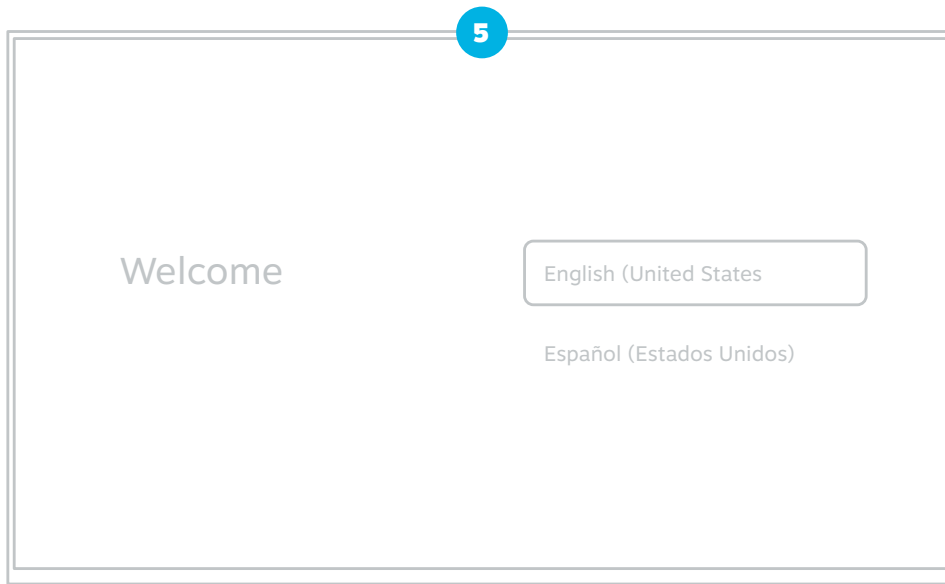

## ***Follow the on-screen instructions***

When your TV powers on, follow the easy on-screen instructions for setup.

Connecting your TV to the Internet gives you access to all the things that make your TV smart, including apps, Google Assistant, and more. Your TV will automatically detect wireless networks in your area, so have your network name and password handy. If you aren't ready to connect to a wireless network you can still use it as a basic TV and can connect it later within settings.

# SETTING UP YOUR TV

(continued)



## Activate your TV

To activate your TV you'll need a computer, smartphone or tablet. When setup is complete you'll be directed to the home screen.

**Set up Google TV™** for full access to all of your TVs features like installing apps, personalized entertainment, and Google Assistant. For this selection, a Google Account is required for activation. You can login to an existing Google Account, or create a new one by following the prompts.

**TIP:** Download the Google Home app for faster set up, or continue set up on the TV using the remote.


**Set up Basic TV** if you prefer to use your TV without an Internet connection or without a Google Account. Some features aren't available in basic TV (ie: features that require a Google Account, installing apps, Google Assistant, or casting content). You can always setup Google TV later within the TV settings.

*A paid subscription or other payments may be required for some streaming channels.  
Channel availability subject to change and varies by country or region.*

**FOR SUPPORT, VISIT [ELEMENTELECTRONICS.COM/SUPPORT](https://www.elementelectronics.com/support)**




# USING YOUR REMOTE

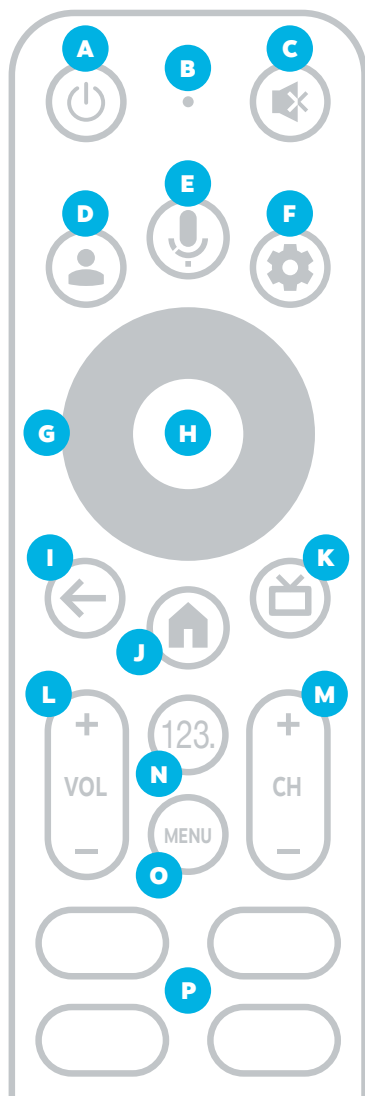


- A Power** Turn your TV on and off
- B Microphone** Speak into the microphone after pressing the Google Assistant button
- C Mute** Turn your TV sound on and off
- D Profile** Select your Google profile
- E Google Assistant** Ask Google to find movies, stream apps, play music, control the TV, and more – all with your voice. Press the Google Assistant button on the remote to get started.
- F Dashboard** Display the dashboard menu to access quick TV settings, inputs, and more
- G Navigation Pad** Select up, down, left and right
- H Select** Confirm your selection
- I Back** Return to the previous screen
- J Home** Return to the home screen
- K Guide** Display over-the-air live TV channels when the TV is connected to an antenna; or when pressed in DTV mode, the electronic program guide (EPG) will display
- L Volume** Make your TV louder or softer
- M Channel** Select the channel
- N Virtual Keyboard** Display the on-screen virtual keyboard
- O Menu** Display the Menu settings
- P App shortcuts** Launch the labeled app when your TV is connected to the Internet

# CONNECTING AN ANTENNA

With the built-in tuner you can connect your TV to an antenna and enjoy over-the-air entertainment.

1. To connect your TV to an antenna, connect a coax cable (not included) into your TV's **ANT/CABLE** port and the other end into your device.
2. Turn your TV on and press the  button on your remote and then press **Select**.
3. Navigate **channels & inputs > channels > channel scan**
4. Follow the on-screen instructions.

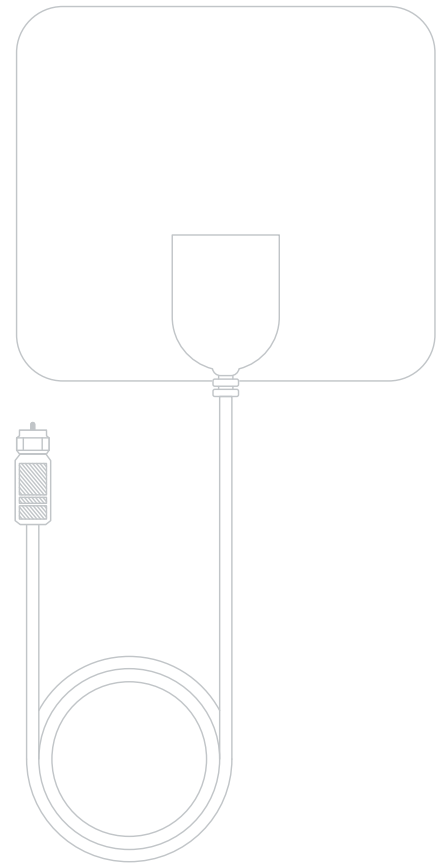

# UNIVERSAL REMOTE SETUP

If you prefer to use your cable set-top box or satellite receiver remote as a universal remote, please refer to the manual your cable or satellite service provided. It includes instructions on how to program your remote to your TV.



# LET'S REGISTER YOUR PRODUCT



*It's super easy, just head on over to [elementelectronics.com/register](http://elementelectronics.com/register)*

## **BENEFITS OF REGISTERING YOUR PRODUCT:**



### **Support**

Get assistance quickly by pre-registering your product.



### **News & Offers**

Take advantage of the latest news and special offers from Element.



### **Updates**

Stay current with important product updates and notifications.



### **Warranty**

Receive a 2-year limited warranty with registration\*

*\*1-year manufacturer's limited warranty with purchase, or 2-year limited warranty with product registration within 90 days of purchase. See warranty card for details.*

# **WE'RE HERE TO HELP**

Find resources and get help with product setup, connecting devices, technical issues, downloading manuals and more!

***We're available 24 hours a day, 7 days a week***



***elementelectronics.com***



***1.888.842.3577***



***customerservice@elementelectronics.com***

To learn more about your Google TV, or to review common issues and solutions, visit [support.google.com/googletv](https://support.google.com/googletv)

We recommend keeping your TV box for the duration of your warranty. See your product warranty for details.

***FOR SUPPORT, VISIT ELEMENTELECTRONICS.COM/SUPPORT***





Element, the Element Logo, and Bring it home are trademarks of Element Brand Holding, LLC. ©2024 Element Brand Holding, LLC. All Rights Reserved.

Google TV is the name of this device's software experience and a trademark of Google LLC.

Google and Google Cast are trademarks of Google LLC.