



4K

86"
CLASS

QUICK START GUIDE





WHAT'S INCLUDED





Your new TV!

Voice Remote

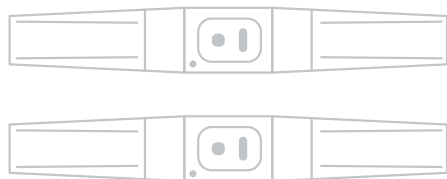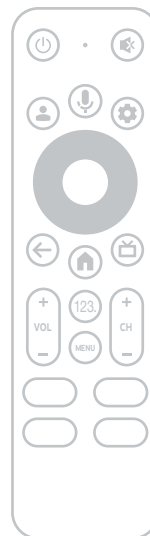

TV Stand

  Stand Screws




2 AAA Remote Batteries

WHAT YOU'LL NEED (NOT INCLUDED)



Screwdriver
Phillips head

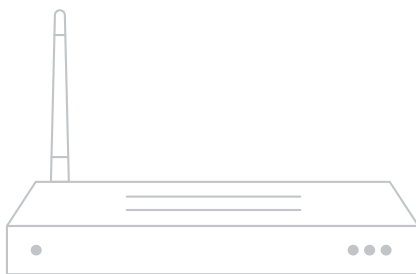

Wireless Router
Needed for streaming



Internet connection
Needed for streaming



Smartphone, computer or tablet
Needed for setup

CONNECT DEVICES TO YOUR TV

Check to ensure that you have selected the right cables for the ports and that they are connected securely (*cables and external devices not included*). Loose connections can affect your picture and audio quality.

ANT



Connect an outdoor or indoor antenna.

HDMI



Connect a Blu-ray or DVD player, gaming console, or other external devices to your TV. Highest quality audio/visual connection.

OPTICAL



Connect an optical cable from an external digital audio system.

LAN




Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.

CONNECT DEVICES TO YOUR TV


(continued)

USB

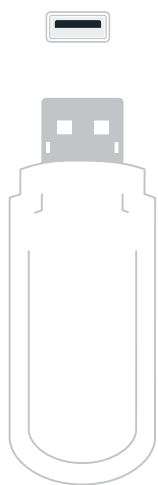


Connect a USB device for browsing photos, music, or videos.

MINI AV IN

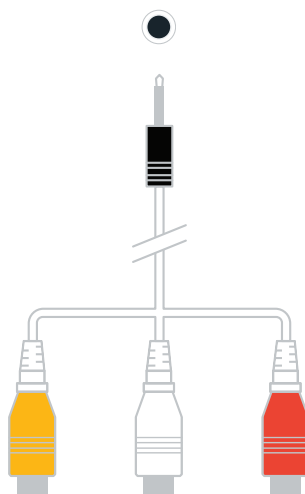

Connect a composite video cable and left-right audio cables from an external AV device.

SETTING UP YOUR TV

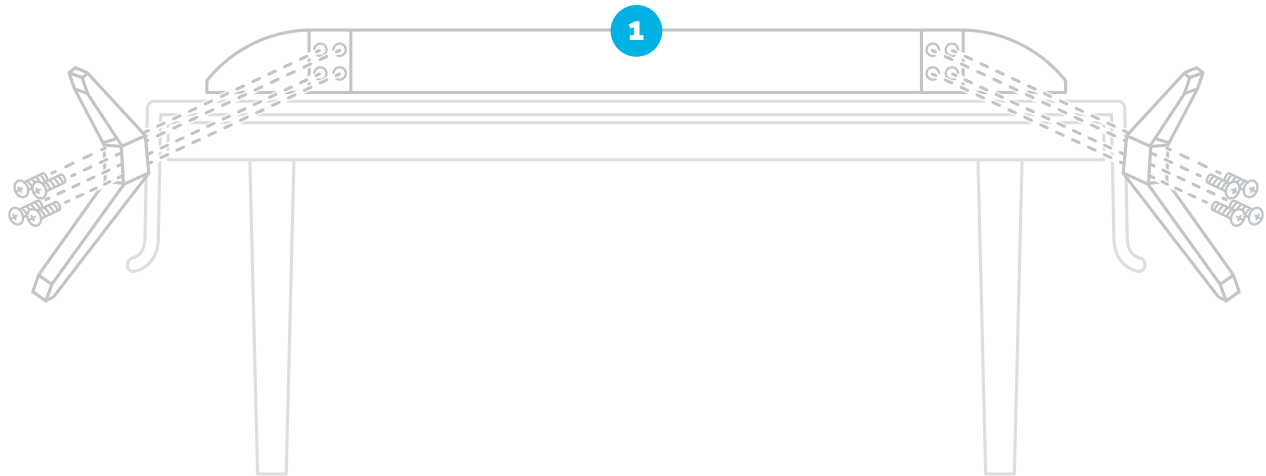

Installing the stands

⚠ WARNING: Your TV is heavy (>82 lbs)! A minimum of two people are required for installation. Do not install the stands if you want to wall mount your TV.


You will need: Phillips screwdriver (not included)

1. Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
2. Use a Phillips screwdriver to attach each stand with the provided screws.
3. Use the handles on the back of the TV to help lift and place it upright on a stable, level surface.

To avoid damages, never carry your TV by holding or putting pressure onto the glass. Use the attached handles when lifting and take extra care when handling.

SETTING UP YOUR TV

(continued)

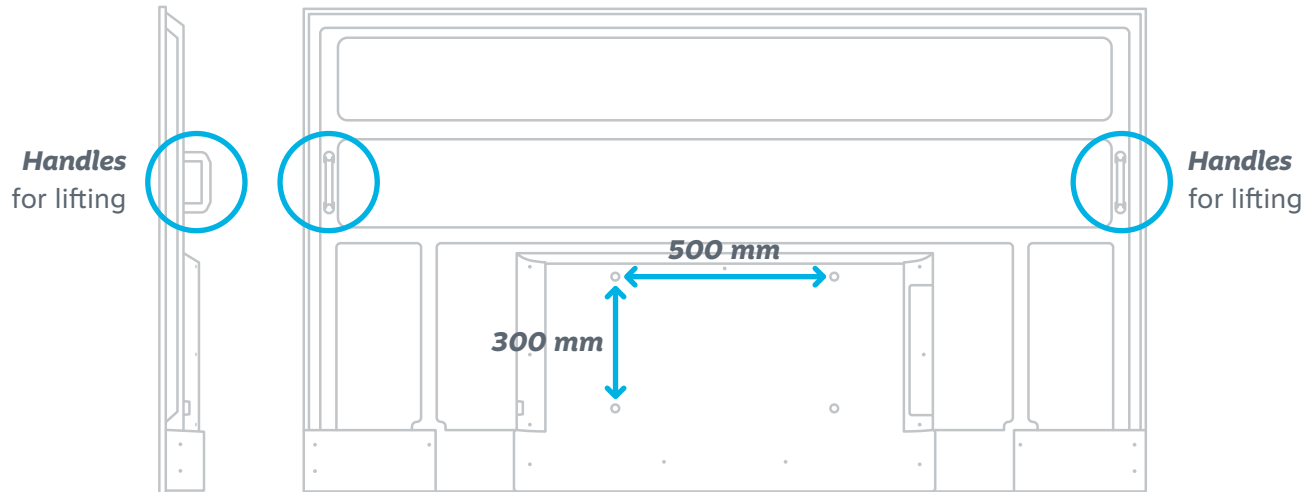

Mounting your TV

If you choose to wall mount your TV, please ensure your wall mount (not included) and supporting structure can hold >82 lbs and is properly anchored.

Your TV has four mounting holes for a 500 x 300 mm VESA approved mounting bracket.


1. Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
2. Mount the VESA bracket using four M8 x 25 mm (max depth) screws (not included) and follow the mounting instructions provided with your wall mount.

If you have any doubts about your ability to safely install your TV, please consult a professional installer.

FOR SUPPORT, VISIT [ELEMENTELECTRONICS.COM/SUPPORT](https://www.elementelectronics.com/support)

SETTING UP YOUR TV

(continued)

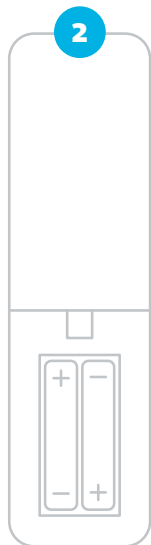

Setting up your remote

Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.


Pairing your remote

When the TV prompts you to start pairing the remote, press and hold the ⬅️ and 🏠 buttons on the remote until the light on the remote starts to pulse. Once complete, follow the on-screen instructions.

Note: Internet connection is required in order to use Google Assistant.

TIP: Always replace dead batteries with two brand new batteries from the same manufacturer. Never use damaged batteries.


If your remote gets warm/hot during use, discontinue use and contact customer support immediately.

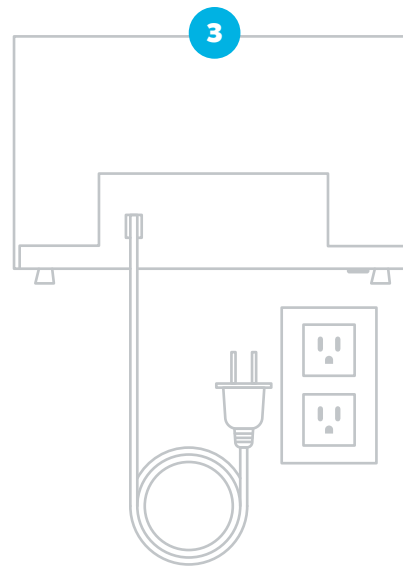

Power button


Plug in and turn on TV

Plug your TV into the wall outlet and press the power button on your remote control. Your TV will display a launch screen followed by the first setup screen.

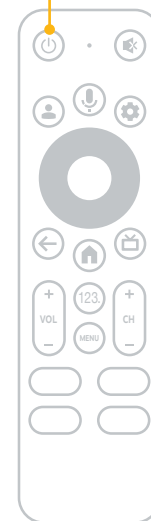

SETTING UP YOUR TV

(continued)

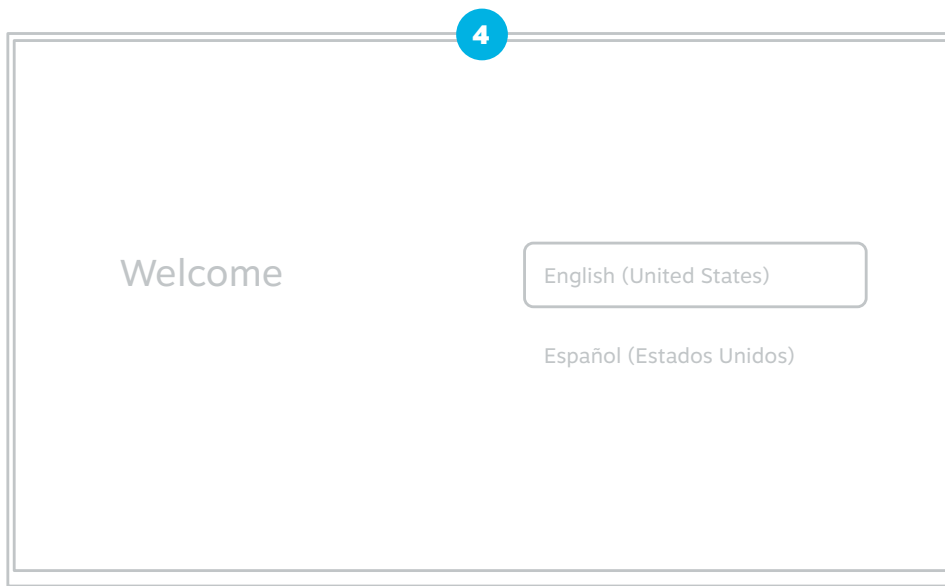

Follow the on-screen instructions

When your TV powers on, follow the easy on-screen instructions for setup.

Connecting your TV to the Internet gives you access to all the things that make your TV smart, including apps, Google Assistant, and more. Your TV will automatically detect wireless networks in your area, so have your network name and password handy. If you aren't ready to connect to a wireless network you can still use it as a basic TV and can connect it later within settings.

SETTING UP YOUR TV

(continued)



Activate your TV

To activate your TV you'll need a computer, smartphone or tablet. When setup is complete you'll be directed to the home screen.


Set up Google TV™ for full access to all of your TVs features like installing apps, personalized entertainment, and Google Assistant. For this selection, a Google Account is required for activation. You can login to an existing Google Account, or create a new one by following the prompts.

TIP: Download the Google Home app for faster set up, or continue set up on the TV using the remote.

Set up Basic TV if you prefer to use your TV without an Internet connection or without a Google Account. Some features aren't available in basic TV (ie: features that require a Google Account, installing apps, Google Assistant, or casting content). You can always setup Google TV later within the TV settings.

*A paid subscription or other payments may be required for some streaming channels.
Channel availability subject to change and varies by country or region.*

USING YOUR REMOTE

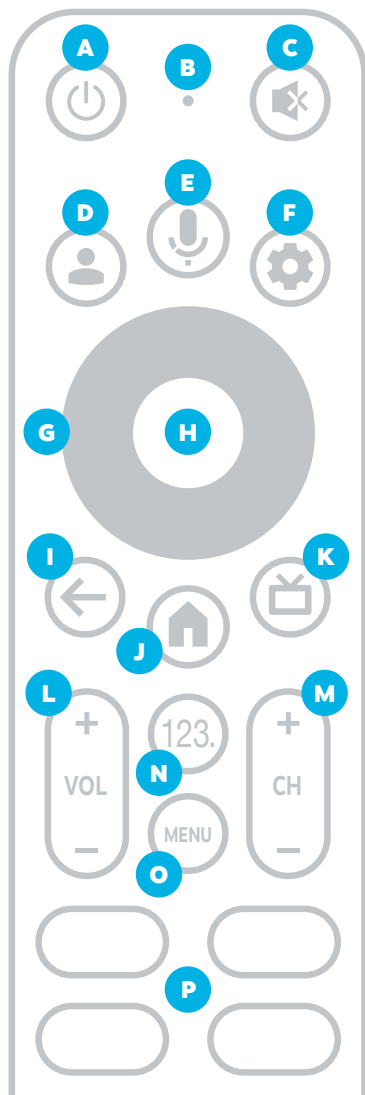


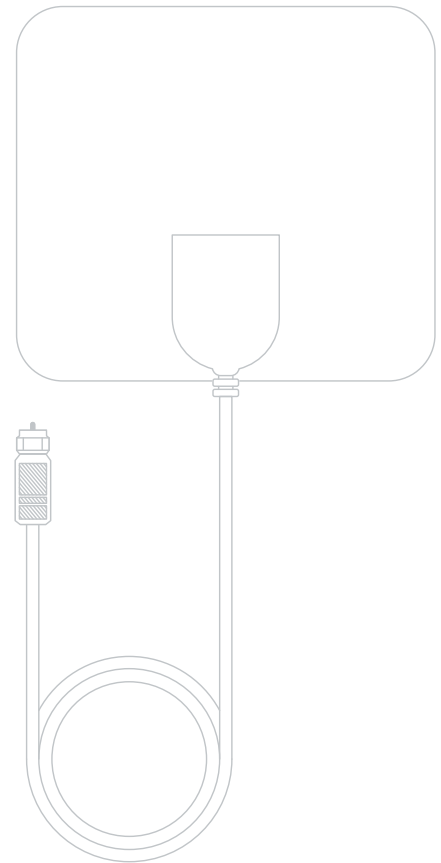
- A Power** Turn your TV on and off
- B Microphone** Speak into the microphone after pressing the Google Assistant button
- C Mute** Turn your TV sound on and off
- D Profile** Select your Google profile
- E Google Assistant** Ask Google to find movies, stream apps, play music, control the TV, and more – all with your voice. Press the Google Assistant button on the remote to get started.
- F Dashboard** Display the dashboard menu to access quick TV settings, inputs, and more
- G Navigation Pad** Select up, down, left and right
- H Select** Confirm your selection
- I Back** Return to the previous screen
- J Home** Return to the home screen
- K Guide** Display over-the-air live TV channels when the TV is connected to an antenna; or when pressed in DTV mode, the electronic program guide (EPG) will display
- L Volume** Make your TV louder or softer
- M Channel** Select the channel
- N Virtual Keyboard** Display the on-screen virtual keyboard
- O Menu** Display the Menu settings
- P App shortcuts** Launch the labeled app when your TV is connected to the Internet



CONNECTING AN ANTENNA

With the built-in tuner you can connect your TV to an antenna and enjoy over-the-air entertainment.

1. To connect your TV to an antenna, connect a coax cable (not included) into your TV's **ANT/CABLE** port and the other end into your device.
2. Turn your TV on and press the  button on your remote and then press **Select**.
3. Navigate **channels & inputs > channels > channel scan**
4. Follow the on-screen instructions.



UNIVERSAL REMOTE SETUP

If you prefer to use your cable set-top box or satellite receiver remote as a universal remote, please refer to the manual your cable or satellite service provided. It includes instructions on how to program your remote to your TV.

LET'S REGISTER YOUR PRODUCT



It's super easy, just head on over to elementelectronics.com/register

BENEFITS OF REGISTERING YOUR PRODUCT:



Support

Get assistance quickly by pre-registering your product.



News & Offers

Take advantage of the latest news and special offers from Element.



Updates

Stay current with important product updates and notifications.



Warranty

Receive a 2-year limited warranty with registration*

**1-year manufacturer's limited warranty with purchase, or 2-year limited warranty with product registration within 90 days of purchase. See warranty card for details.*

FOR SUPPORT, VISIT ELEMENTELECTRONICS.COM/SUPPORT



WE'RE HERE TO HELP

Find resources and get help with product setup, connecting devices, technical issues, downloading manuals and more!

We're available 24 hours a day, 7 days a week



elementelectronics.com



1.888.842.3577



customerservice@elementelectronics.com

To learn more about your Google TV, or to review common issues and solutions, visit support.google.com/googletv

We recommend keeping your TV box for the duration of your warranty. See your product warranty for details.



FOR SUPPORT, VISIT [ELEMENTELECTRONICS.COM/SUPPORT](https://www.elementelectronics.com/support)

15





Element, the Element Logo, and Bring it home are trademarks of Element Brand Holding, LLC. ©2023 Element Brand Holding, LLC. All Rights Reserved.

Google TV is the name of this device's software experience and a trademark of Google LLC.

Google and Google Home are trademarks of Google LLC.