





# WHAT'S INCLUDED








### Remote





**Batteries** 

# Screwdriver Phillips head

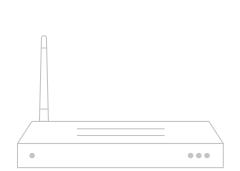

Wireless Router Internet connection
Needed for streaming Needed for streaming



Smartphone, computer or tablet
Needed for setup



WHAT YOU'LL NEED

(NOT INCLUDED)

# CONNECT DEVICES TO YOUR TV


connection.

Check to ensure that you have selected the right cables for the ports and that they are connected securely (cables and external devices not included). Loose connections can affect your picture and audio quality.

#### ANT/CABLE **OPTICAL HEADPHONE HDMI** LAN Connect a Blu-ray Connect an Connect outdoor or or DVD player, an optical cable from indoor gaming console, or other external an external antenna. Connect an Ethernet Connect devices to your TV. digital audio headphones cable to access Highest quality system. or external a network or the audio/visual speakers. Internet. The TV

# CONNECT DEVICES TO YOUR TV

(continued)

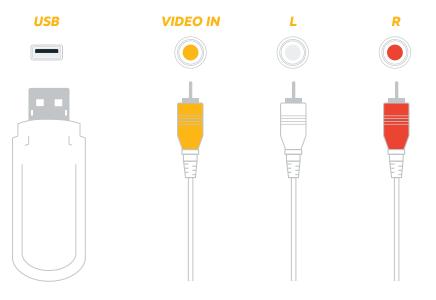

Connect a
USB device for
browsing photos,
music, movies, or

pausing live TV.

Connect a composite video cable and left-right audio cables from an external AV device.





also has a wireless

connectivity feature.


### SETTING UP **YOUR TV**

#### **Place Batteries** in Remote

Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.

TIP: Always replace dead batteries with two brand-new batteries from the same manufacturer. Never use damaged batteries.

If your remote gets warm/hot during use, discontinue use and contact customer support immediately.

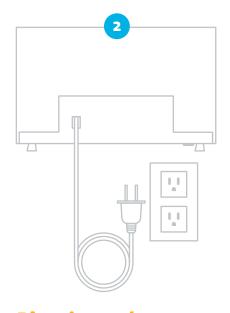

**Power** 

button

(+) (à

© element

Roku TV

**QUICK START GUIDE** 

#### Plug in and turn on TV

Plug your TV into the wall outlet and press the power button on your remote control.

# SETTING UP **YOUR TV**

(continued)



#### Follow the on-screen instructions

When your TV powers on, follow the easy on-screen instructions for setup.

Your TV will automatically detect wireless networks in your area, so have your network name and password handy. If you aren't ready to connect to a wireless network you can still use it as a regular TV.



#### Activate your smart TV

Activate your TV using your computer, smartphone, or tablet to link to a Roku account. You need a Roku account to activate your TV and access entertainment across thousands of streaming channels.

#### **NOTE: ROKU DOESN'T CHARGE FOR ACTIVATION SUPPORT -BEWARE OF SCAMS.**

Roku accounts are free and while a valid credit card number is not required to create a Roku account, saving your credit card information makes renting and purchasing entertainment from the Roku Channel Store fast and convenient.

Once connected to your account, your TV will automatically update with the latest software, and you can start streaming immediately.

A paid subscription or other payments may be required for some streaming channels. Channel availability subject to change and varies by country.








# USING YOUR REMOTE

The Roku TV remote should feel right at home in your hand. We designed it to be incredibly intuitive for watching TV and navigating on-screen menus.

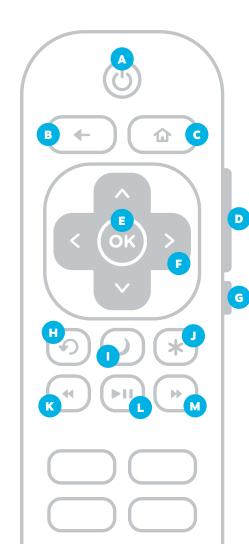

- A Power Turn TV on and off
- **Back** Return to previous screen
- c Home Return to Roku Home screen
- **Volume** Raise and lower volume
- **E OK** Select an option from a menu
- **F** Navigate Move up, down, left or right
- **G** Mute Mute and restore sound
- Instant Replay Replay the last few seconds of streaming video
- **Sleep** Set the sleep timer
- Options Access to picture settings, more streaming channel icons and more
- RWD Rewind streaming video, scroll left one page at a time
- Play/Pause Start or pause playback
- **FWD** Fast forward streaming video, scroll right one page at a time

**TIP:** The \* button gives you easy access to picture settings, display options and more. Try it on every screen.

Actual remote includes pre-set channel buttons with channel logos.

## CONNECTING AN ANTENNA

With the built-in tuner you can connect your TV to an antenna and enjoy over-the-air entertainment.

- **1.** When the setup wizard is complete select the Antenna/Live TV icon from the home screen.
- 2. Follow the on-screen instructions.
- **3.** Whenever you want to watch antenna TV, select the Antenna/Live TV icon.
- **4.** Live TV Pause feature: Pause up to 90 minutes of live antenna TV when you connect a 16 GB or larger USB drive to your TV. All data on the USB drive will be deleted prior to use.

### UNIVERSAL REMOTE SETUP

If you prefer to use your cable set-top box or satellite receiver remote as a universal remote, please refer to the manual your cable or satellite service provided. It includes instructions on how to program your remote to your TV.

You can find the most common cable and satellite provider universal remote codes at roku.com/universalremote.





## LET'S REGISTER YOUR PRODUCT



It's super easy, just head on over to elementelectronics.com/register

#### **BENEFITS OF REGISTERING YOUR PRODUCT:**



Support

Get assistance quickly by pre-registering your product.



News & Offers
Take advantage of the latest news and special offers from Element.



Updates
Stay current with
important product updates
and notifications.



Warranty
Receive a 2 year
warranty with
product registration\*



Find resources and get help with product setup, connecting devices, technical issues, downloading manuals and more!

#### We're available 24 hours a day, 7 days a week



elementelectronics.com



1.888.842.3577



customerservice@elementelectronics.com

To download the full Roku TV User Guide visit go.roku.com/rokutv





<sup>\*1</sup> year manufacturer warranty with purchase or 2 year warranty with product registration within 90 days of purchase.



Element, the Element Logo, and Bring it home are trademarks of Element Brand Holding, LLC. ©2021, Element Brand Holding, LLC, All Rights Reserved.

Roku, Roku TV, and the Roku logo are trademarks of Roku, Inc.

All other trademarks are the property of the respective owner who has not sponsored, endorsed, or approved this product.