

element • xumoTV

 
Outdoor 4K UHD

Quick Start Guide



Hi! Let's Begin


What's Included

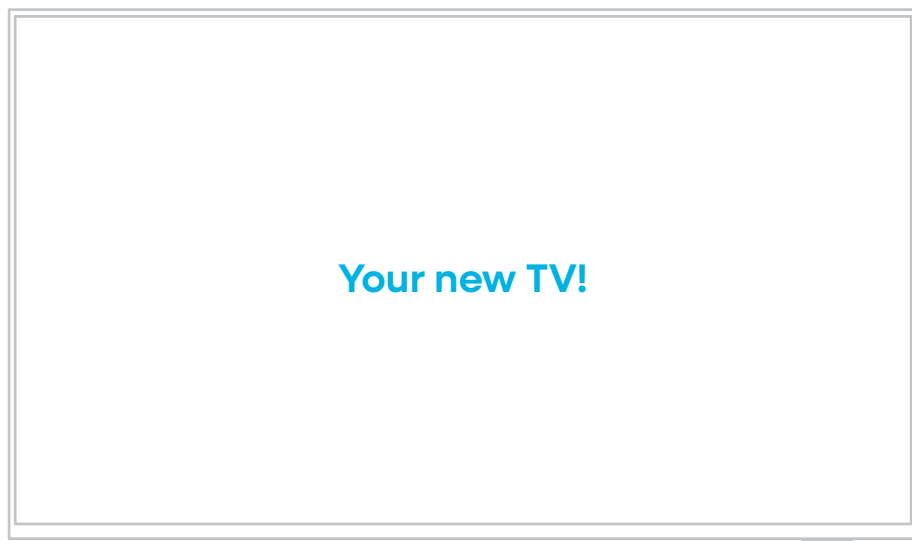

Voice Remote



Protective Remote Sleeve

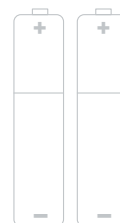


**2 AAA
Remote
Batteries**

What You'll Need (Not Included)



Screwdriver

 Phillips head

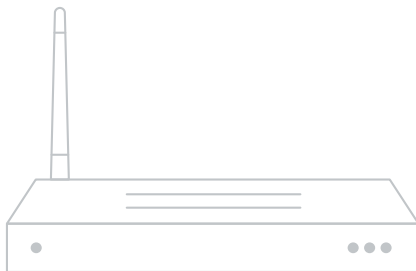

Wireless Router

Needed for streaming



Internet connection

Needed for streaming



Smartphone, computer or tablet

Needed for setup

Connect Devices to Your TV

Check to ensure that you have selected the right cables for the ports and that they are connected securely (cables and external devices not included). Loose connections can affect your picture and audio quality.

ANT



Connect an outdoor or indoor antenna.

HDMI




Connect a Blu-ray or DVD player, gaming console, or other external devices to your TV. Highest quality audio/visual connection.

OPTICAL



Connect an optical cable from an external digital audio system.

HEADPHONE

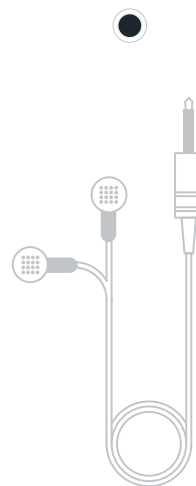

Connect headphones or external speakers.

Connect Devices to Your TV

(continued)

LAN




Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.

USB



Connect a USB device for browsing photos, music, or videos.

MINIAV IN

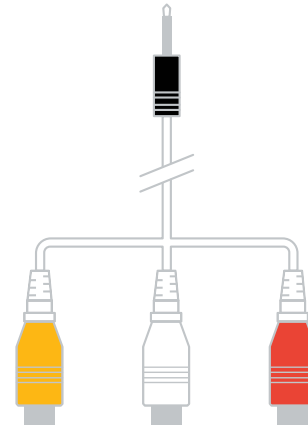

Connect a composite video cable and left-right audio cables from an external AV device (AV adapter included).

Actual connections may vary by model. Please refer to the actual product to determine your connection options.

FOR SUPPORT, VISIT ELEMENTELECTRONICS.COM/SUPPORT

Connect Devices to Your TV

(continued)

Your TV's connections are secured behind a panel door on the back of your TV. This panel is lined with foam to keep dust and moisture out and keep your cords dry and in place. To access your TV's ports and connect devices, complete the following:

Before mounting:

1. Place the TV screen-down on a clean, flat, soft surface (i.e. blanket) to prevent scratches or damage to the screen
2. Locate the panel door on the back of your TV, remove the six screws by hand and open the panel door. **See Figure 1.**
3. Find the power cord (located inside the door) and run the plug out to the bottom of the panel. Do not connect to power until all cable connections have been made. **See Figure 2.**
4. Plug in any devices and ensure they are securely connected. Device cords should run flat out the bottom of the panel (between the two bottom screw holes) and not be layered. **See Figure 2.**
5. Close the panel door and replace the six screws tightly by hand, ensuring there are no large gaps between the foam and cords.

Figure 1


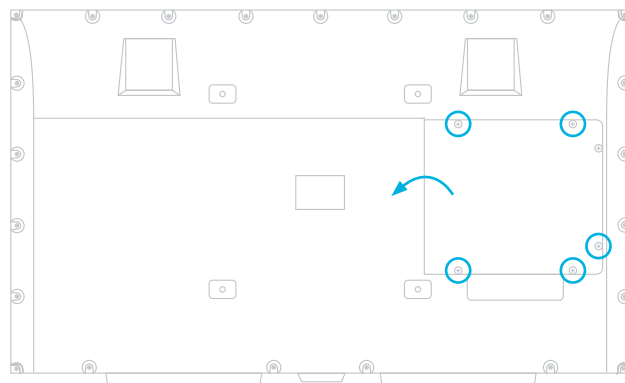 


Figure 2

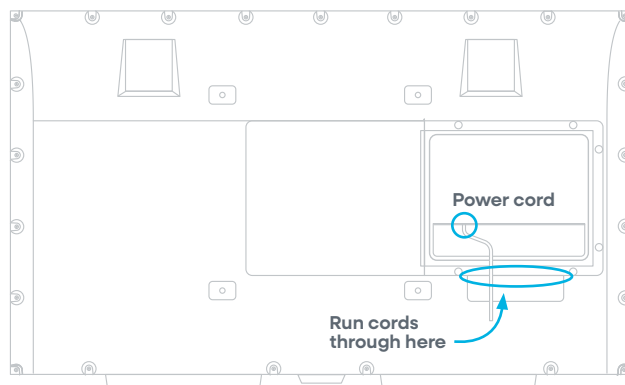 

Setting Up Your TV

TV Placement

Important: Choose a location for your TV where it will NOT be in direct sunlight and is partially shaded (i.e.: near trees, under structures, patio cover, etc.). Remember that the position of the sun changes throughout the day, so choose a location and position based on the time of day you would use it most often.


⚠ WARNING: The TV must be installed at least 5ft away from a pool, spa, or other body of water.

Mounting your TV

Your TV has four mounting holes for a VESA approved mounting bracket (not included). Please ensure your wall mount can hold the weight of your TV and is compatible with a 400 x 400 VESA mount pattern. A minimum of two people are required for installation.

You will need: Phillips screwdriver (not included)

1. Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
2. Use a Phillips screwdriver to remove the four screws located inside the VESA mount points as shown. **⚠ WARNING:** The included screws are NOT for use with a wall mount and should be removed before mounting
3. Mount the VESA bracket using four M8 x 20 mm (max depth) screws (not included) and follow the mounting instructions provided with your wall mount.

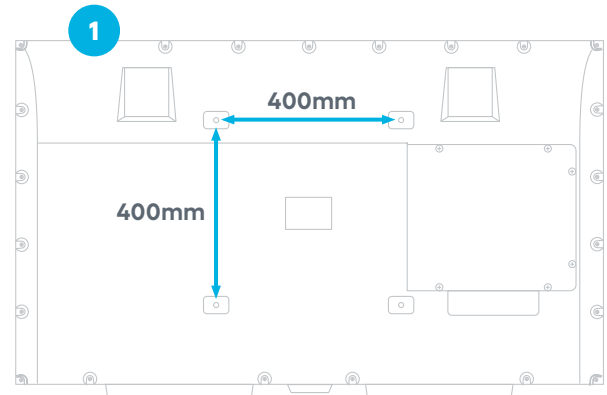

TIP: Connect all your devices prior to mounting your TV, as the connections panel will not be easily accessible after mounting.

If you have any doubts about your ability to safely install your TV, please consult a professional installer.

Setting Up Your TV

(continued)



Setting up your remote

Power your TV remote by inserting the included batteries carefully and matching them to the (+) and (-) indicated inside the battery compartment.

Pairing your remote to a new Xumo TV


Before using your remote, you'll need to pair it with your TV. For the easiest pairing process, insert batteries into your remote within 15 minutes of plugging in your TV to initiate automatic pairing. If your remote has trouble pairing, follow these steps:

Pairing your remote to an existing Xumo TV




1. Press and hold the  and  buttons for 2 seconds.
2. If pairing fails, turn off your TV and unplug it from the power source. Plug your TV back in, power on and try step 1 again.



Pairing your remote to a sound system

1. Navigate to Settings by selecting the  at the top of the home screen with your remote.
2. Select **Remote > Pair your remote and sound system**.
3. Follow the on-screen instructions.

How to factory reset your remote

1. Press and hold the  and  buttons for 5 seconds
2. With your remote control pointed towards your TV, try pressing the  button then other keys to make sure your remote is working properly


Note: Voice control will not work until your remote is paired. Voice commands only work when your TV is connected to the internet.

TIP: Always replace dead batteries with two brand new batteries from the same manufacturer. Never use damaged batteries.

If your remote gets warm/hot during use, discontinue use and contact customer support immediately.

Setting Up Your TV

(continued)

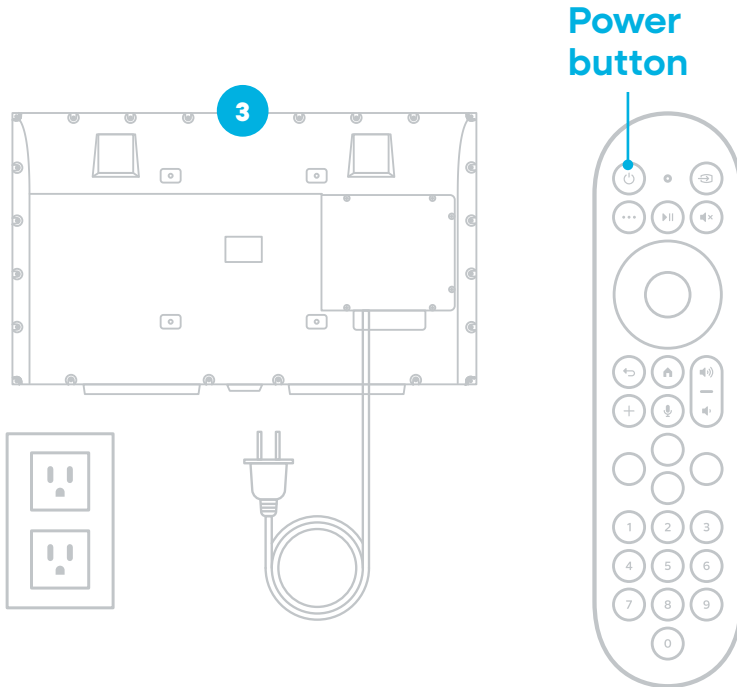

Protective remote sleeve


Place remote inside protective sleeve for added protection against falls or condensation. The protective sleeve is not weather-proof. Please properly store your remote indoors when not in use.

Plug in and turn on TV

Plug your TV into the wall outlet and press the power button on your remote control. Your TV will display a launch screen showing the Element and Xumo TV logos, followed by the first setup screen.

Setting Up Your TV

(continued)

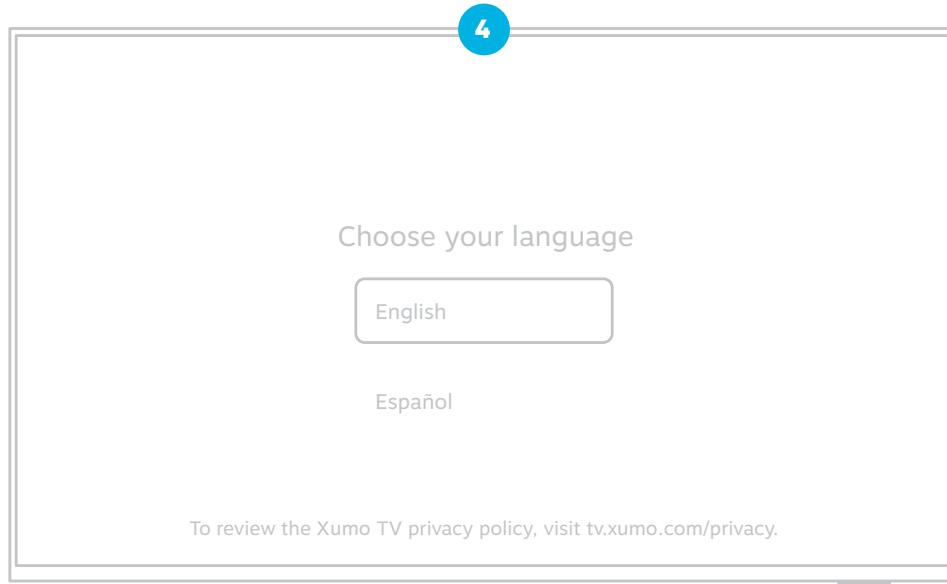

Follow the on-screen instructions

When your TV powers on, follow the easy on-screen instructions for setup.

Connecting your TV to the Internet gives you access to all the things that make your TV smart, including apps, voice controls, and more. Your TV will automatically detect wireless networks in your area, so have your network name and password handy. If you aren't ready to connect to a wireless network you can still use it as a regular TV and can connect it later within settings.

Setting Up Your TV

(continued)



Activate your TV


To activate your TV, you'll need a computer, smartphone or tablet. Once you see the activation code on the TV screen you can visit **xumo.com/activate** (or simply scan the QR code on-screen with your smart device camera) and follow the on-screen instructions to complete registration. You'll be directed to the home screen when setup is complete.

You may also create a Xumo account with a payment method if you would like to make purchases on your TV.

Note: Creating a Xumo account and adding payment details is optional and **not required** to use your TV.

A paid subscription or other payment may be required for some streaming channels.
Channel availability subject to change and varies by country or region.

Using Your Remote

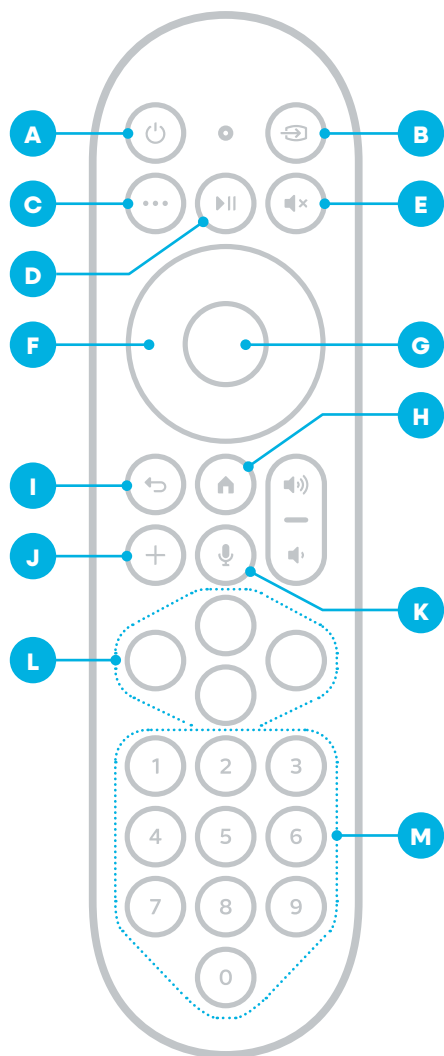

- A Power** Turn your TV on/off
- B Input** Change your TV's input
- C Quick Access** Open a pop-up menu or view contextual information based on your current screen
- D Play/Pause** Play and pause content
- E Mute** Silence your TV's audio
- F Navigation pad** Move up, down, left or right
- G OK** Select an item
- H Home** Return to the home screen or wake your TV
- I Back** Return to the previous screen
- J Add** Add a movie or TV show to My List
- K Voice Control** Navigate your device and find something to watch with voice commands — just press and hold, say a command, then release
- L App Shortcuts** Launch specific apps
- M Number pad** Change channels and input PINs


Connecting an Antenna

With the built-in tuner you can connect your TV to an antenna and enjoy over-the-air entertainment.

1. To connect your TV to an antenna, connect a coax cable (not included) into your TV's **ANT** port and the other end into your device.
2. Turn your TV on and press the home button on your remote.
3. Select the **Antenna** tile, or open **Settings > Antenna and inputs > Antenna > Scan for channels**
4. Follow the on-screen instructions.

Universal Remote Setup

If you prefer to use your cable set-top box or satellite receiver remote as a universal remote, please refer to the manual your cable or satellite service provided. It includes instructions on how to program your remote to the TV.

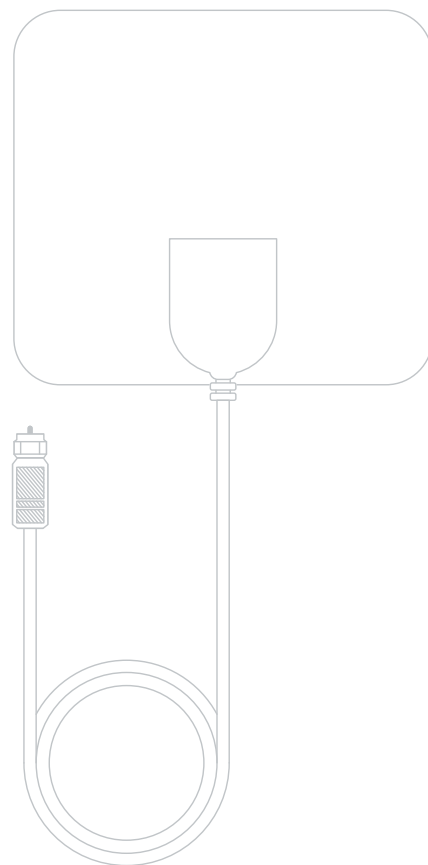

Let's Register Your Product



To register and activate your 2-year warranty, scan the QR code or visit elementelectronics.com/register

Why Should I Register?



Support

Get assistance quickly when you need it by pre-registering



News & Offers

Get the latest news and offers



Updates

Stay current with important product updates and notifications

* 1-year manufacturer's limited warranty with purchase, or 2-year limited warranty with product registration within 90 days of purchase. See warranty card for details.

We're Here to Help

Find resources and get help with product setup, connecting devices, technical issues, downloading manuals and more.

We're available 24 hours a day, 7 days a week

- elementelectronics.com
- [1.888.842.3577](tel:18888423577)
- customerservice@elementelectronics.com

To download the full Xumo TV User Manual, and review the latest information on common issues and solutions, visit tv.xumo.com/support

We recommend keeping your TV box for the duration of your warranty. See your product warranty for details.

element[®]

Element and the Element Logo are trademarks of Element Brand Holding, LLC. ©2025 Element Brand Holding, LLC. All Rights Reserved.

Xumo TV, Xumo Play, the Xumo logos, and all other Xumo product names, logos, slogans or marks are the trademarks of Xumo or its licensors. ©2025 Xumo. All Rights Reserved.