

element

 Google TV

32" 1080p FHD Portable Smart TV

Quick Start Guide

Hi! Let's Begin



 
What's Included



Your new TV!




Voice
Remote

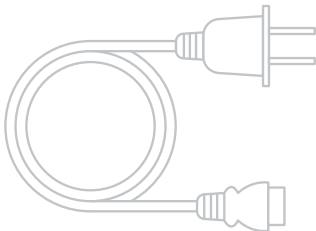

Power Cord



 AC Power
Adapter

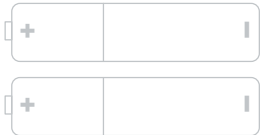

2 AAA Remote
Batteries

What You'll Need (Not Included)



Wireless or Internet connection

Needed for streaming and software updates



Smartphone, computer or tablet

Needed for setup

Connect Devices to Your TV

Check to ensure that you have selected the right cables for the ports and that they are connected securely (cables and external devices not included). Loose connections can affect your picture and audio quality.

ANT



 
Connect an outdoor or indoor antenna.

HDMI



Connect a Blu-ray or DVD player, gaming console, or other external devices to your TV. Highest quality audio/visual connection.

HEADPHONE

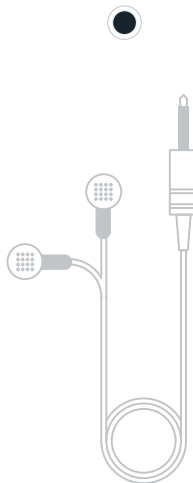

Connect headphones or external speakers.

LAN

 


Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.

Connect Devices to Your TV


(continued)

USB

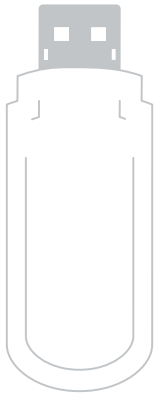

Connect a USB device for browsing photos, music, or videos.

 MINI AV IN

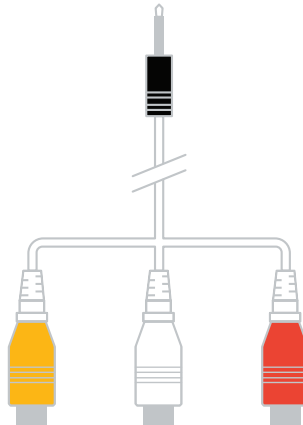

Connect a composite video cable and left-right audio cables from an external AV device (AV adapter included).

OPTICAL



Connect an optical cable from an external digital audio system.

 
Setting Up Your TV

TV placement

This TV **cannot** be mounted on the wall. It is meant to sit on a sturdy, flat surface.

Plug in and turn on TV

1. Before turning your TV on, plug the power cord into the AC power adapter.
2. Connect the AC power adapter to your TV.
3. Place the battery power switch to ON.
4. Plug your TV into the wall outlet and press the power button on the side of the TV. Your TV will display a launch screen followed by the first setup screen.

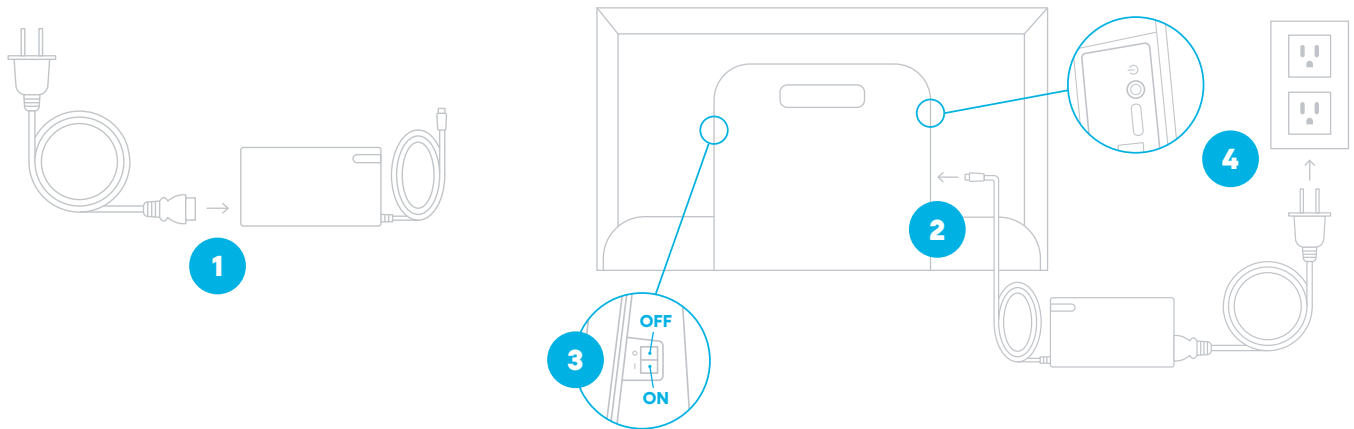

Using the Portable TV

Your TV has a rechargeable lithium-ion battery and can be used as a portable TV when not connected to a wall outlet.

When the TV is plugged into an outlet, the TV will use the outlet power regardless of the battery switch position.

Setting Up Your TV

(continued)

To use the battery to power the TV, the battery switch must be in the ON position. While using the TV with the battery, if the switch is OFF, the TV will power off.

Charging the Battery

To charge the battery, the TV must be plugged into an outlet and the battery switch in the ON position. The charging time is 3-4 hours when the TV is powered off. If the TV is powered on and in use, the charging time can take up to 12 hours.

Battery Usage and Care

NOTE: Only use the provided power cord and AC power adapter provided to operate and charge this TV. See the enclosed safety guide for more important information regarding battery care and safety.

 
To view the battery status and manage battery icon preferences, navigate to the Home (Your Apps) screen and select the Help menu.

When in portable mode and the battery level reaches 20% and 10%, a pop-up will appear on the screen to prompt charging or switching to energy saving mode.

Total usage time when watching TV from battery power is about 3-4 hours. Actual charging and battery life will vary depending on use. Your TV's battery has a total usage of 300-500 charges before battery degradation. To replace the battery, please use a certified technician. Do not attempt to replace the battery yourself.

Setting Up Your TV

(continued)

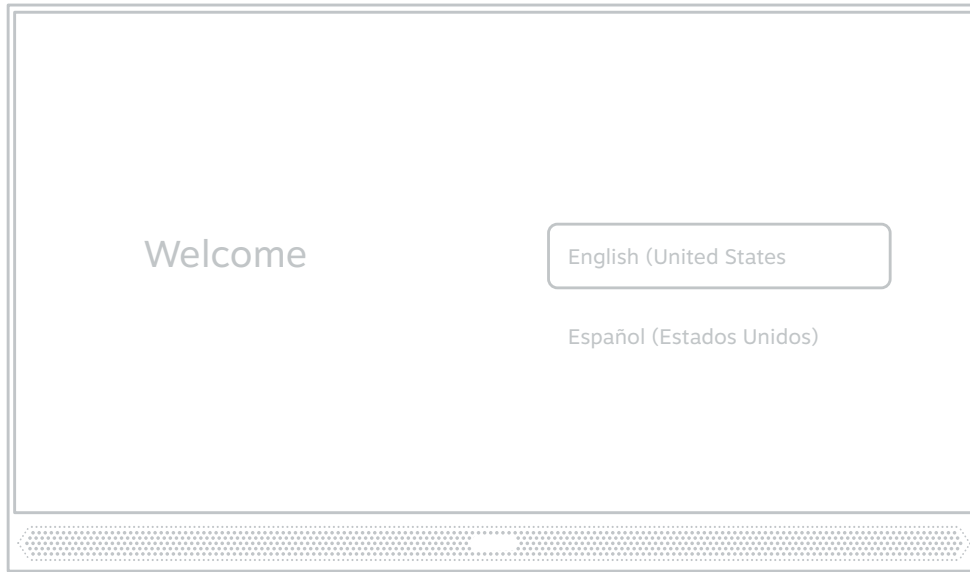

Follow the on-screen instructions

When your TV powers on, follow the easy on-screen instructions for setup.

Connecting your TV to the Internet gives you access to all the things that make your TV smart, including apps, Google Assistant, and more. Your TV will automatically detect wireless networks in your area, so have your network name and password handy. If you aren't ready to connect to a wireless network you can still use it as a basic TV and can connect it later within settings.

Setting Up Your TV

(continued)



Activate your TV

To activate your TV, you'll need a computer, smartphone or tablet. When setup is complete you'll be directed to the home screen.

Set up Google TV™ for full access to all of your TV's features like installing apps, personalized entertainment, and Google Assistant. For this selection, a Google Account is required for activation. You can login to an existing Google Account, or create a new one by following the prompts.

TIP: Download the Google Home app for faster set up, or continue set up on the TV using the remote.

Set up basic TV if you prefer to use your TV without an Internet connection or without a Google Account. Some features aren't available in basic TV (ie: features that require a Google Account, installing apps, Google Assistant, or casting content). You can always setup Google TV later within the TV settings.

A paid subscription or other payment may be required for some streaming channels.
Channel availability subject to change and varies by country or region.

FOR SUPPORT, VISIT [ELEMENTELECTRONICS.COM/SUPPORT](https://www.elementelectronics.com/support)



Setting Up Your TV

(continued)

Setting up your remote

Power your TV remote by inserting the included batteries carefully matching (+) and (-) indicated inside the battery compartment.

 
Pairing your remote

When the TV prompts you to start pairing the remote, press and hold the  and  buttons on the remote until the light on the remote starts to pulse. Once complete, follow the on-screen instructions.


Note: Internet connection is required in order to use Google Assistant.

TIP: Always replace dead batteries with two brand new batteries from the same manufacturer. Never use damaged batteries.

If your remote gets warm/hot during use, discontinue use and contact customer support immediately.

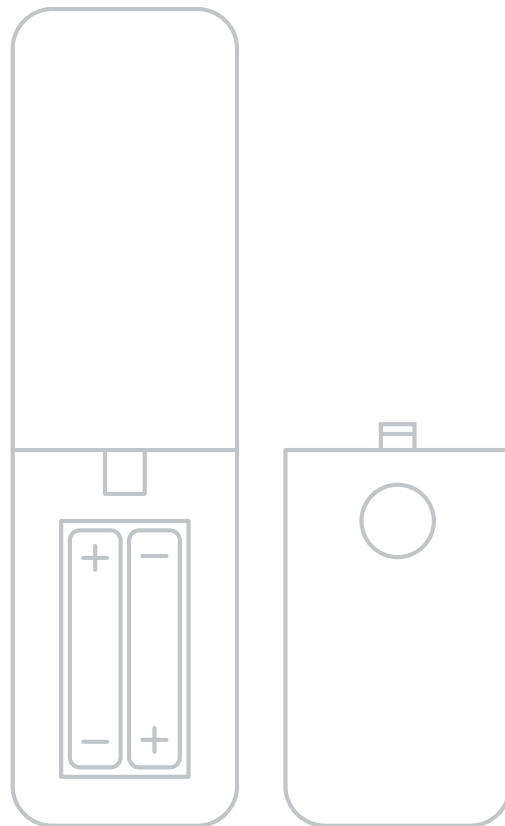


Using Your Remote

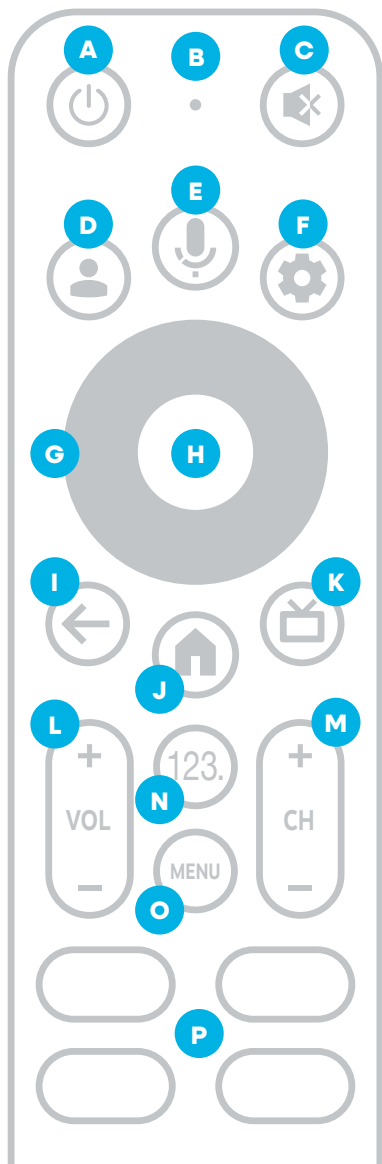 

- A Power** Turn your TV on/off
- B Microphone** Speak into the microphone after pressing the Google Assistant button
- C Mute** Turn your TV sound on/off
- D Profile** Select your Google profile
- E Google Assistant** Ask Google Assistant to find movies, stream apps, play music, and control the TV - all with your voice. Even get answers, control smart home devices, and more.
- F Dashboard** Display the dashboard menu to access quick TV settings, inputs, and more
- G Navigation Pad** Select up, down, left or right
- H Select** Confirm selection
- I Back** Return to the previous screen
- J Home** Return to the home screen
- K Guide** Display over-the-air live TV channels when the TV is connected to an antenna; or when pressed in DTV mode, the electronic program guide (EPG) will display
- L Volume** Make your TV louder or softer
- M Channel** Select the channel
- N Virtual Keyboard** Display the on-screen virtual keyboard
- O Menu** Display the Menu settings
- P App shortcuts** Launch the labeled app when your TV is connected to the internet

 
Connecting an Antenna

With the built-in tuner you can connect your TV to an antenna and enjoy over-the-air entertainment.

1. To connect your TV to an antenna, connect a coax cable (not included) into your TV's **ANT/CABLE** port and the other end into your device.
2. Turn your TV on and press the  button on your remote.
3. Navigate **channels & inputs > channels > channel scan**
4. Follow the on-screen instructions.

Universal Remote Setup

If you prefer to use your cable set-top box or satellite receiver remote as a universal remote, please refer to the manual your cable or satellite service provided. It includes instructions on how to program your remote to your TV.

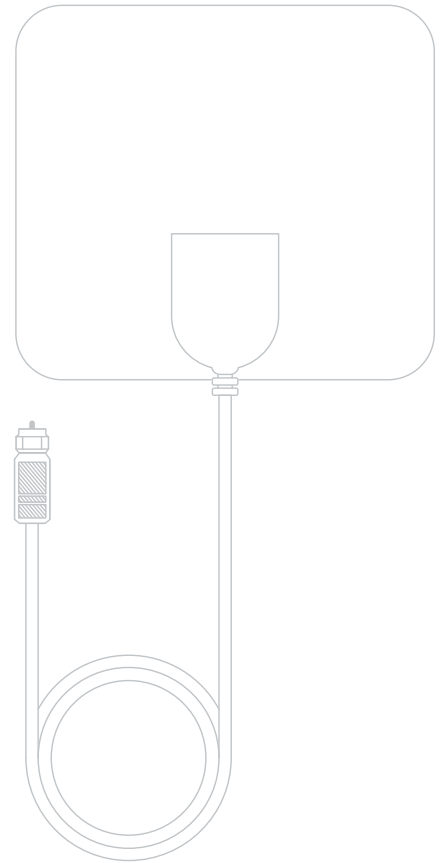

Let's Register Your Product



To register and activate your 2-year warranty, scan the QR code or visit elementelectronics.com/register

Why Should I Register?

Without product registration within 90 days of purchase, your product only receives a 1-year limited warranty.



 
Support

Get assistance quickly when you need it by pre-registering



News & Offers

Get the latest news and offers

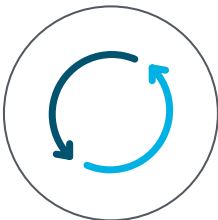

Updates

Stay current with important product updates and notifications

We're Here to Help

Find resources and get help with product setup, connecting devices, technical issues, downloading manuals and more.

We're available 24 hours a day, 7 days a week

- elementelectronics.com
- [1.888.842.3577](tel:18888423577)
- customerservice@elementelectronics.com

To learn more about your Google TV, or to review common issues and solutions, visit support.google.com/googletv

We recommend keeping your TV box for the duration of your warranty. See your product warranty for details.

This page left intentionally blank.

element[®]

Element and the Element Logo are trademarks of Element Brand Holding, LLC. ©2025 Element Brand Holding, LLC. All Rights Reserved.

Google TV is the name of this device's software experience and a trademark of Google LLC.

Google, Google Home and Google TV are trademarks of Google LLC.