 


element® • Roku TV

 
720P HD Mini Smart Projector

User Manual

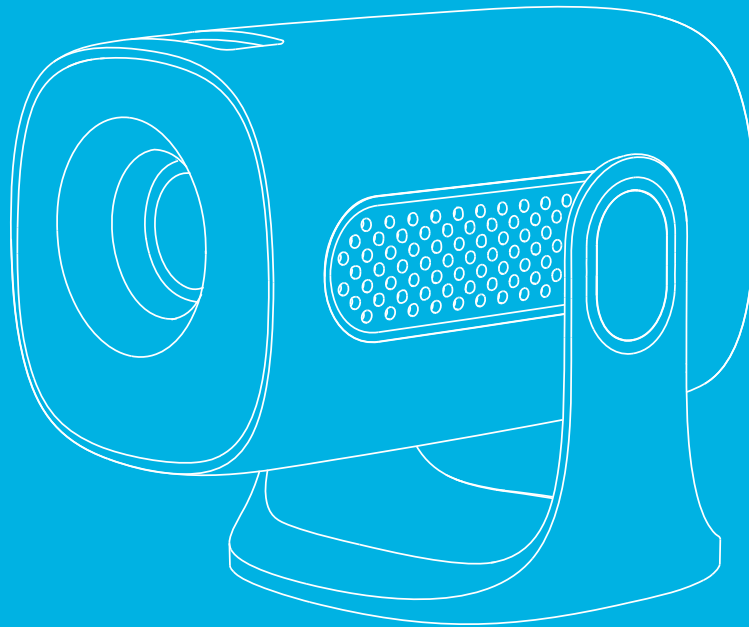

EPJ140AGR

What's Included

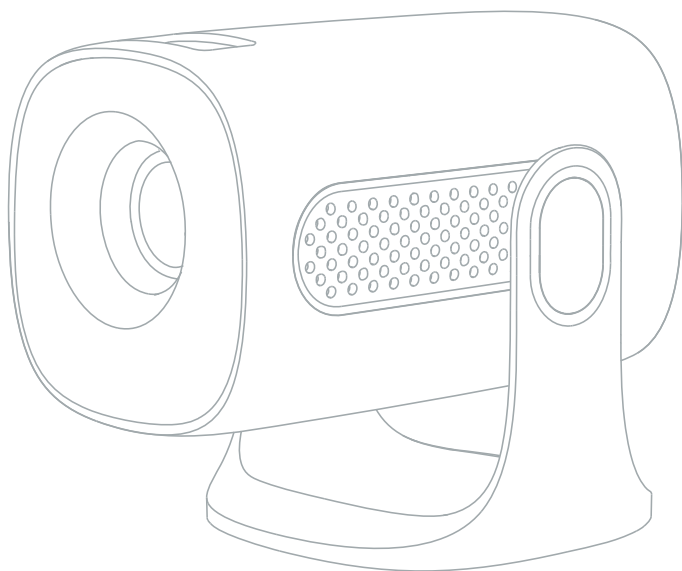

Your new projector!

 
NOTE: Roku account and internet connection are required for activation.



Carrying Case



Remote
(batteries not included)

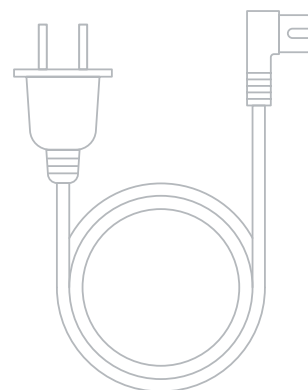

Power cable

Important

- Please read through this manual before making connections and operating your new projector.
Retain this manual for future reference.

DANGER:

- To reduce the risk of electric shock, burns or injury:
 - Do not use while bathing or in a shower.
 - Do not place or store unit where it can fall or be pulled into a tub or sink.
 - Do not place in, drop or submerge in water or other liquid.
 - Do not reach for unit that has fallen into water. Unplug it immediately.
 - Care should be taken so that objects do not fall and liquids are not spilled on the unit.
- If the projector encounters water, unplug it immediately.
- Prevent objects from falling into the unit and avoid spilling liquids onto the product.

WARNING:

- Close supervision is required when the projector is used near children or individuals requiring supervision.
- Use this product only for its intended use as described in the manual.
- Unplug this unit during lightening storms or when unused for long periods of time.
- Never drop or insert an object into any opening.
- Protect the adapter cord from being stepped on or pinched, especially at plug outlets, power strips, and where it connects to the unit.
- Do not allow the adapter cord to touch hot surfaces. Wrap cord loosely around the unit when storing.
- This unit should be placed away from direct sunlight and heat sources such as radiators, electric heaters, stoves, or other heat-generating equipment. Avoid placing it on top of devices that produce heat.
- Do not block the unit's ventilation openings with materials such as clothing, plastic bags, or paper.
- Do not place the unit on soft surfaces, such as a bed or couch, where the ventilation openings may be obstructed.
- Do not overload electrical outlet. Use only the power source as indicated.
- Do not carry this unit by cord or use cord as handle.
- Do not operate this unit if the power cord or plug is damaged, if the unit is malfunctioning, if it has been dropped or damaged, or if it has been exposed to water. If the power supply cord is damaged, do not attempt to repair it yourself.
- To avoid the risk of electric shock, do not disassemble or attempt to repair the unit.
- Do not operate in the presence of explosive and/or flammable fumes.
- Never remove the plug from the socket by pulling the power cord.

CAUTION:

- To reduce the risk of electric shock, do not remove cover. There are non-serviceable parts inside.
- To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.



The lightning flash is intended to alert the user to the presence of dangerous voltage within the product's enclosure, and touching the internal components may result in a risk of electric shock to persons.



The exclamation mark is intended to alert the user to the presence of important operating instructions.

Setting Up Your Projector

 
Installation

Please read the user manual carefully before setting up your new projector.

1. Place the projector on a flat, stable surface.
2. Connect the power cord to the projector's AC input.
3. Plug the other end into a standard wall outlet. If using an extension cord, ensure it has the correct power rating. Use only the provided power cable or an approved AC adapter.
4. Press the Power button on the projector or remote to turn it on.
5. Center the projector to align with the screen


Wall Distance

To get the best image quality, it is important to place the projector at the correct distance from the wall or surface you want to project onto. The projector is recommended for screen sizes of 40–120 inches and works best in a dark room. Use the image below to find the optimal distance from the wall or surface for the desired image size.

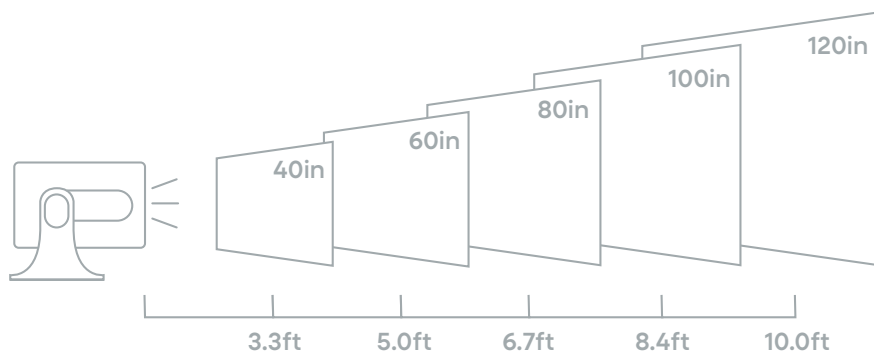

NOTE: The required distance from the wall or surface may vary depending on projector placement, lens adjustment, and room conditions. For optimal image quality, keep the projector's horizontal angle below 15° and vertical angle below 10°.

 Projector Overview

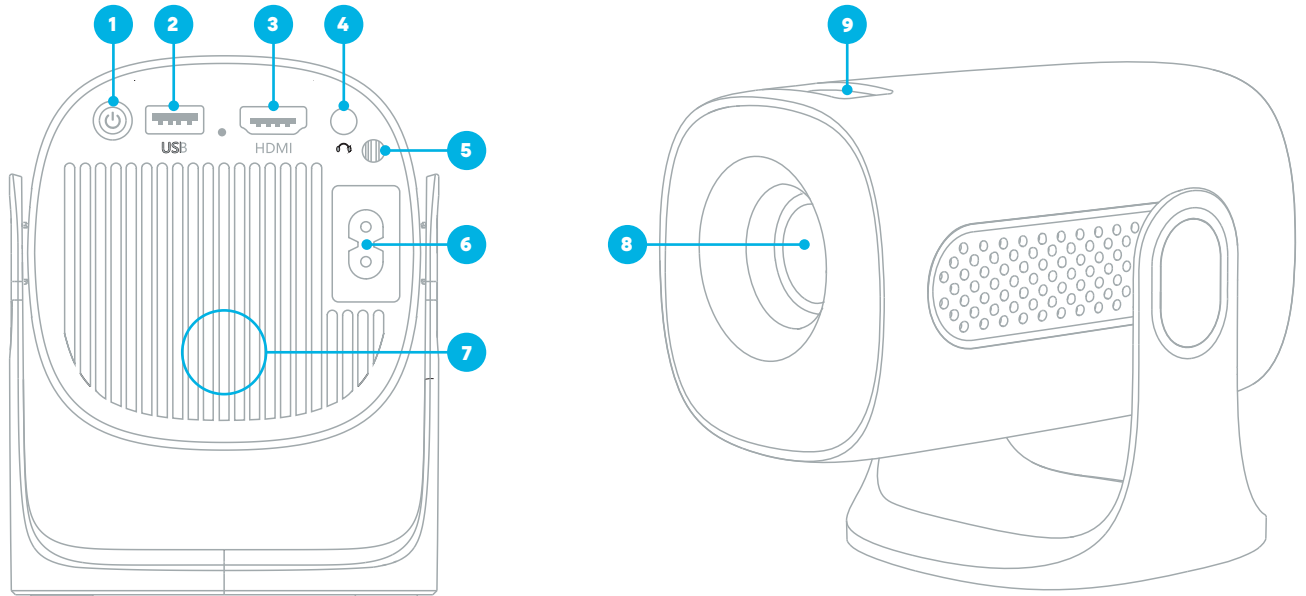

1 Power ON/OFF Turns the projector on and off

2 USB USB input for media

3 HDMI Port HDMI input connector

4 Audio Out Audio output jack

5 IR Receiver Receives signals from the remote control

6 AC 110-240V 50/60Hz Connects the projector to a power outlet

7 Vent Cooling airflow vent

 
8 Lens Projects the image onto your screen or wall

9 Focus Knob Sharpens the image

Remote Control

The projector remote lets you control power, playback, volume, and menu navigation from a distance. To power the remote, insert two AAA batteries (not included), making sure to match the (+) and (-) markings inside the compartment. Always use new, undamaged batteries of the same type and manufacturer. If the remote becomes warm or hot during use, stop using it immediately and contact customer support.




- 1 Power ON/OFF** Turn the projector on and off
- 2 Back** Return to the previous screen
- 3 OK** Confirm selection
- 4 Directional Keypad** Navigate menus (up, down, left, right)
- 5 Sleep** Activate standby mode
- 6 Instant Replay** Replay the last couple of seconds
- 7 Rewind** Move media back
- 8 Play/Pause** Start or pause media
- 9 Home** Return to the main menu or home screen
- 10 Volume Up** Increase the volume
- 11 Volume Down** Decrease the volume
- 12 Mute** Silence the audio
- 13 Options** Open additional settings
- 14 Fast Forward** Move media forward
- 15 App Shortcuts** Launch specific apps

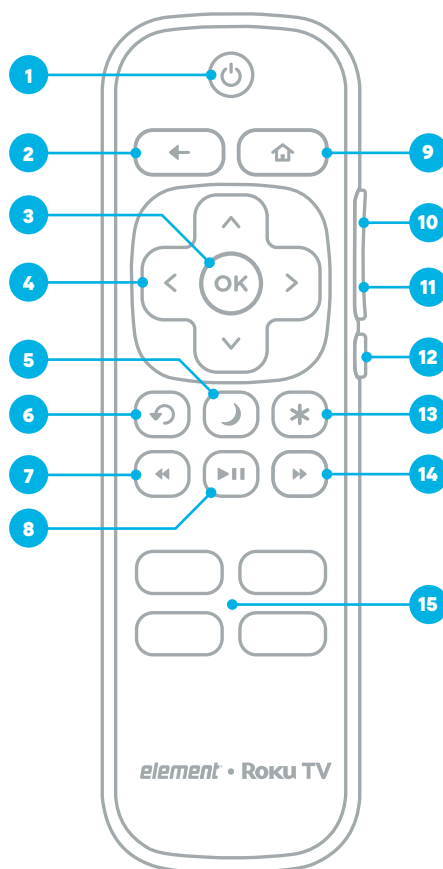

Quick Start Guide

Complete Guided Setup

   After powering on, follow the on-screen instructions on your Element Roku Projector by using your computer or smartphone to link to a Roku account.

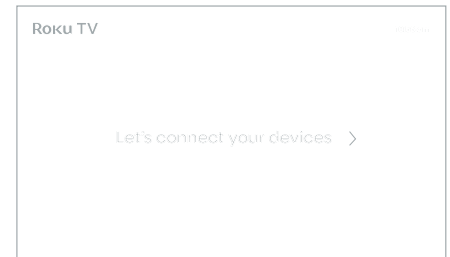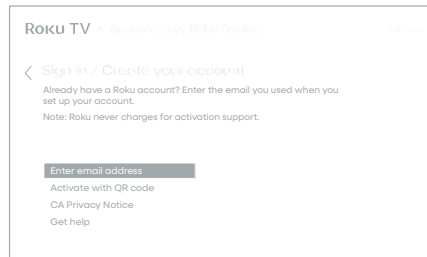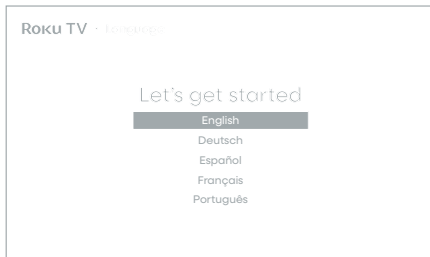

Setup is done, congratulations!

Continue using your remote to personalize your home screen, channel line-up, stream movies and so much more.

TIP: A Roku account and internet connection are required for activation.

IMPORTANT: Roku never charges for a Roku activation.

Image Adjustment

Focus

MANUAL FOCUS: Locate the focus knob on the top cover of the projector near the recessed area of the lens. Manually adjust the focus gear by turning it left and right until the image is as clear as possible.

Keystone Correction

MANUAL KEYSTONE CORRECTION: To adjust manually, go to Home > Settings > Projector Settings > Image correction > Manual Keystone, then follow the onscreen instructions to adjust the image using four-point correction.

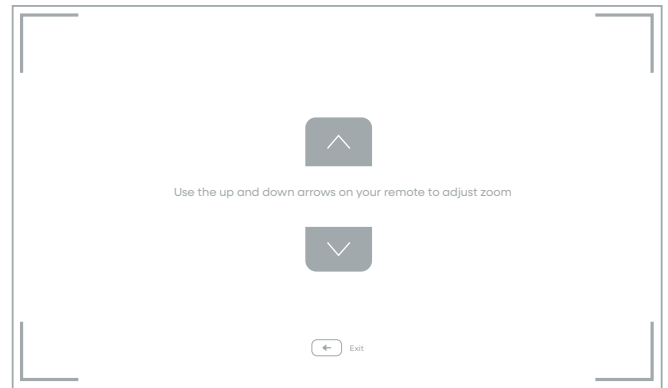 
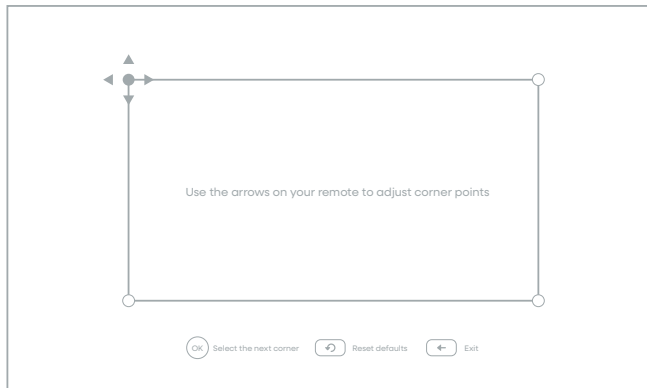 


Image Scaling

MANUAL IMAGE SCALING: Adjust the same image size by going to Home > Settings > Projector settings> Image correction > Zoom.

Projector Connections

USB

Connect the USB to the projector. Follow the on-screen prompts to launch the Roku Media Player, then locate and play your file. You can also access the Roku Media Player directly from the home screen.

HDMI ARC (Audio Return Channel)

Connect the HDMI cable to the projector. Then go to Home > Settings > Picture Settings and select HDMI 1 (ARC). You can also access HDMI 1 (ARC) from the Home screen under Apps & Inputs.

Bluetooth

To connect a Bluetooth device, go to Settings > Bluetooth Settings. Turn on Bluetooth, search for nearby devices, select your device, and follow the prompts to pair and connect.

Network

To connect to your network, go to Home > Settings > Network > Setup Connections > Wireless. Select the network you want and enter the password to connect.

Troubleshooting

Use the chart below to troubleshoot any issues you may be having. If you do not see your issue listed below, or the troubleshooting guide does not solve your issue, please contact Element customer support.

Problem	Solution
The remote control will not work.	<ul style="list-style-type: none">- Ensure the remote is pointed directly at the IR receiver on the projector.- Confirm that two AAA batteries are installed correctly in the remote control.- Do not mix old and new batteries, as this may cause insufficient power and operational issues.
The image looks blurry.	<ul style="list-style-type: none">- Manual focus to get the best image.- The quality of the projection screen will also affect the image quality. For best results, use a white wall or better quality screen. Using thin, non-white, and/or gauze type screens will reduce image quality.
There is no sound.	<ul style="list-style-type: none">- Press the mute button on and off.
My projector shut off without warning.	<ul style="list-style-type: none">- Make sure all vents are clear and unobstructed.- Keep the bottom air inlet free from blockage.- Unplug the power cord after prolonged use to extend service life. `

Troubleshooting

(continued)

Problem	Solution
The image on my projector looks upside down.	<ul style="list-style-type: none">- Click on “Projector mode” and select the corresponding mode.
There is a black spot on the screen.	<ul style="list-style-type: none">- Wipe the lens with a dry and clean cloth to remove dust.
How do I install the Remote Control Mobile App?	<p>The free Roku app allows you to use your mobile device as a fully functional remote control with voice search and keypad.</p> <ul style="list-style-type: none">- Download the Roku app on your phone or tablet from Google Play™ or the Apple App Store™.- Search for “Roku App” and select the Roku app by Roku, Inc.- Follow the on-screen prompts to complete setup.

Specifications

Display Technology

LCD

Operating System

Roku

Light Source

LED

Aspect Ratio

16:9

Native Resolution

1280*720 @ 60FPS

Picture Format

PNG/GIF/JPEG

Weight

Product Weight: 1.2 lbs

Gross/Shipping Weight: 1.9 lbs

Ports

HDMI (1), USB (1), Audio Output (1)

Dimensions

Height: 5.2"

Width: 5.9"


Depth: 4.1"

Temperature

Working: 32° - 104°

Storage: 14° - 140°

License

 Dolby Audio Dolby, Dolby Audio and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories.

 HDMI[®] The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RADIATION EXPOSURE STATEMENT

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Let's Register Your Product



Scan the QR code or visit
elementelectronics.com/register

Why Should I Register?

Without product registration within 90 days of purchase, your product only receives a 1-year limited warranty.



 
Support

Get assistance quickly when you need it by pre-registering



News & Offers

Get the latest news and offers

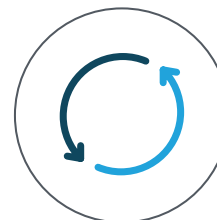

Updates

Stay current with important product updates and notifications

We're Here to Help

Find resources and get help with product setup, connecting devices, technical issues, downloading manuals and more.

We're available 24 hours a day, 7 days a week

- [elementelectronics.com](https://www.elementelectronics.com)
- [1.888.842.3577](tel:18888423577)
- customerservice@elementelectronics.com

element[®]

Element and the Element logo are trademarks of Element Brand Holding, LLC. All other trademarks are the property of the respective owner who has not sponsored, endorsed or approved the product.

© 2026 Element Brand Holding, LLC. All Rights Reserved.

Roku, Roku TV, the Roku logo, and the purple d-pad design are the trademarks of Roku Inc.

All other trademarks and logos herein are the property of their respective owners.

A Roku account and internet connection are required for activation.