 


element[®]

 
Quick Start Guide

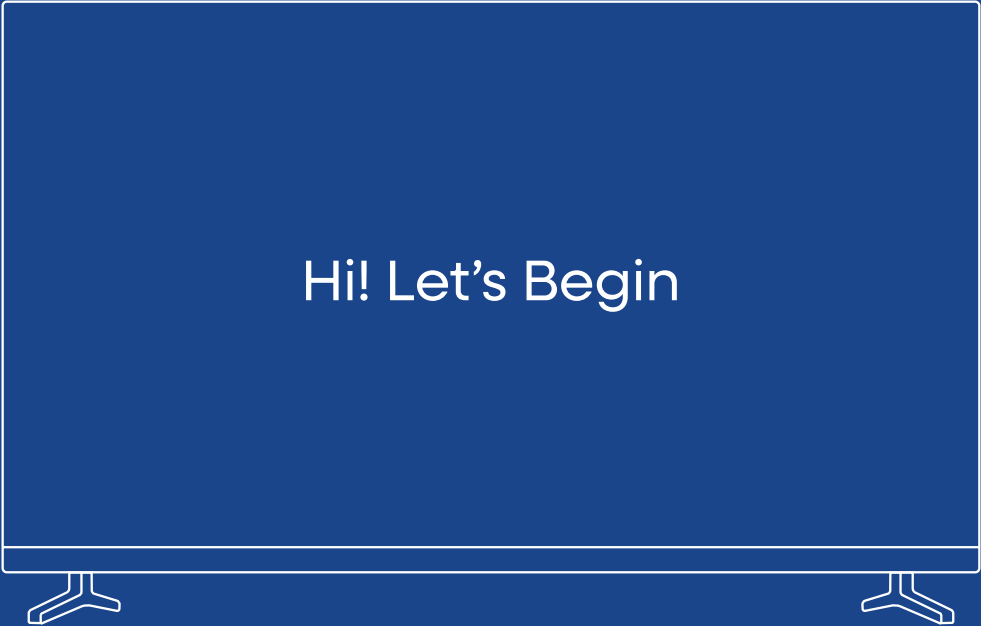

Hi! Let's Begin




What's Included

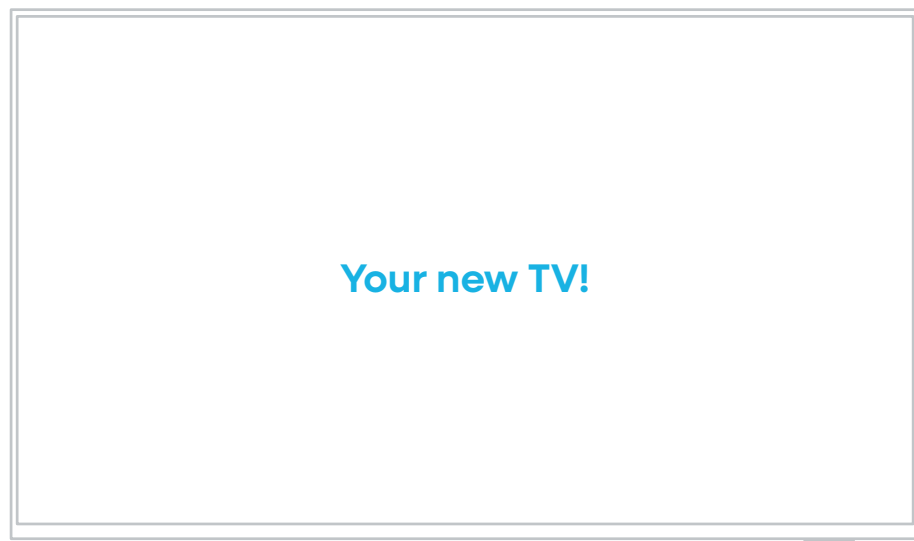


Voice Remote



TV Stand

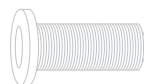

Stand Screws

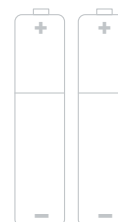

2 AAA
Remote
Batteries

What You'll Need (Not Included)



Screwdriver

Phillips head



Wireless Router

Needed for streaming



Internet connection

Needed for streaming

Connect Devices to Your TV

Check to ensure that you have selected the right cables for the ports and that they are connected securely (cables and external devices not included). Loose connections can affect your picture and audio quality.

COAX/CABLE RF ANTENNA



Connect an outdoor or indoor antenna.

HDMI




Connect a Blu-ray or DVD player, gaming console, or other external devices. Highest quality audio/visual connection.

OPTICAL



Connect an optical cable from an external digital audio system.

AUDIO (HEADPHONE)

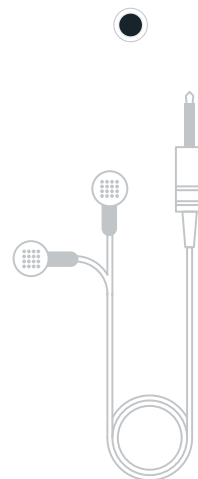

Connect headphones or external speakers.

Connect Devices to Your TV

(continued)

LAN



Connect an Ethernet cable to access a network or the Internet. The TV also has a wireless connectivity feature.

USB



Connect a USB device for browsing photos, music, or videos.

AV IN/
COMPOSITE



L



R




Connect a composite video cable and left-right audio cables from an external AV device.

Applicable on 4K models

Actual connections may vary by model. Please refer to the actual product to determine your connection options.

Setting Up Your TV

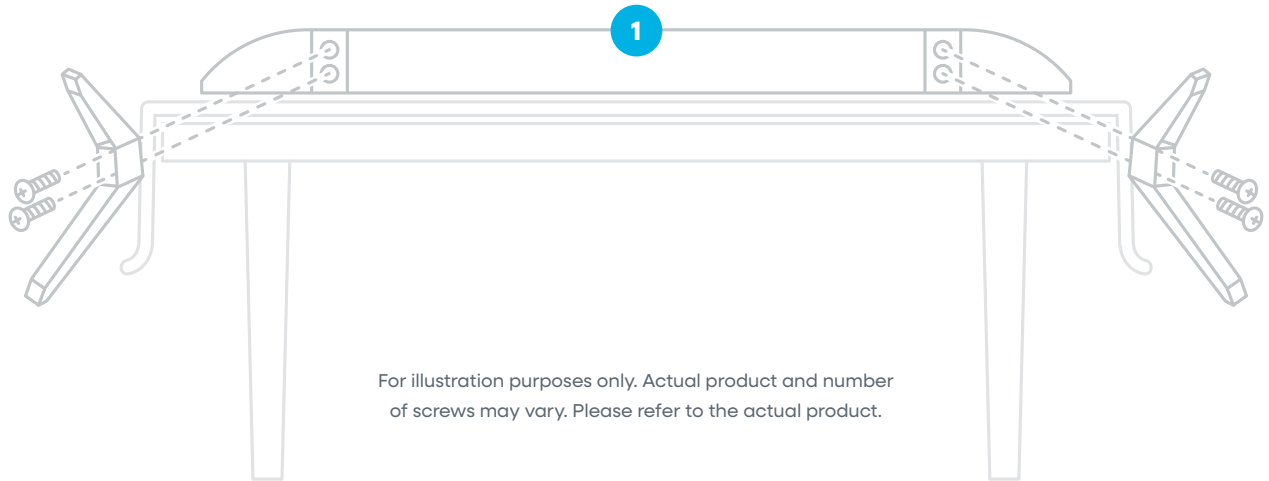

Installing the stands

Do not install the stands if you want to wall mount your TV. See your wall mount instructions for mount installation details.

You will need: Phillips screwdriver (not included)

1. Place the TV screen-down on a clean, flat, soft surface (e.g.: blanket) to prevent scratches or damage to the screen.
2. Use a Phillips screwdriver to attach each stand with the provided screws.
3. Place the TV upright on a stable, level surface.

To avoid damages, never carry your TV by holding or putting pressure onto the glass.

Setting Up Your TV

(continued)

Setting up your remote


Power your TV remote by inserting the included batteries carefully and matching them to the (+) and (-) indicated inside the battery compartment.

Pairing Your Remote During Initial Setup

During the setup process, when you reach the **Pair Your Remote Control** screen, select **Connect**.

On your remote, press and hold the  and  buttons at the same time.

Continue holding for 5 seconds, until a pairing confirmation appears on the TV.

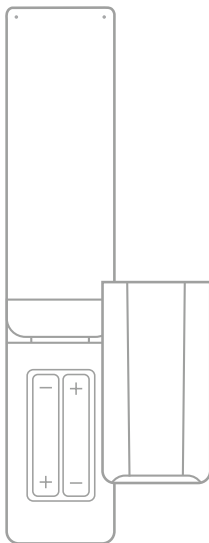

Pairing Your Remote After Initial Setup

1. Go to **Settings > System > Remote Control** and select **OR Press**  on remote control to open the pairing screen on your TV.
2. On your remote, press and hold the  and  buttons at the same time.
3. Continue holding for 5 seconds, until a pairing confirmation appears on the TV.

Unpair Your Remote


1. Go to **Settings > System > Remote Control** and select it.
2. Select **Disconnect & Unpair**.

TIP: Always replace dead batteries with two brand new batteries from the same manufacturer. Never use damaged batteries.

If your remote gets warm/hot during use, discontinue use and contact customer support immediately.

Setting Up Your TV

(continued)

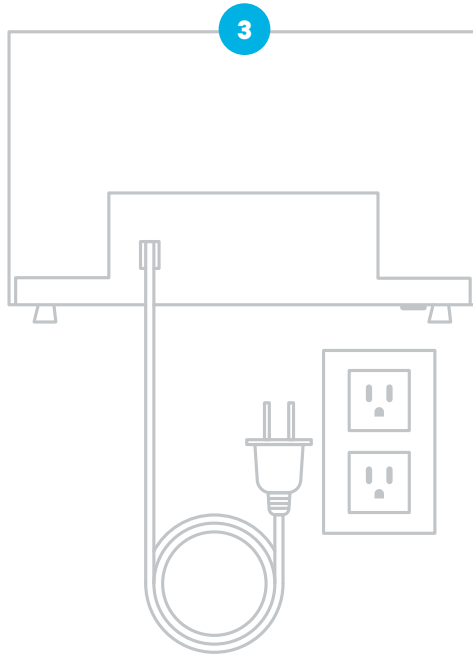

Power
button




Plug in and turn on TV

Plug your TV into a wall outlet and press the power button on your remote control. Your TV will display the Element and Powered by TiVo logos and then the first setup screen.

Setting Up Your TV

(continued)

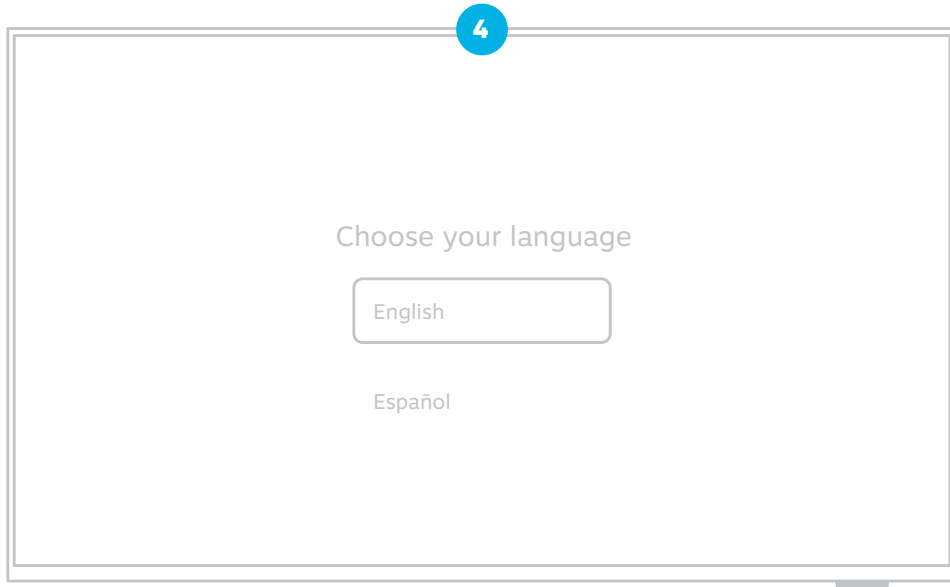


Follow the on-screen instructions

When your TV powers on, follow the easy on-screen instructions for setup.

Connecting your TV to the Internet gives you access to all the things that make your TV smart, including apps, voice controls, and more. Your TV will automatically detect wireless networks in your area, so have your network name and password handy. If you aren't ready to connect to a wireless network you can still use it as a regular TV and can connect it later within settings.

Using Your Remote

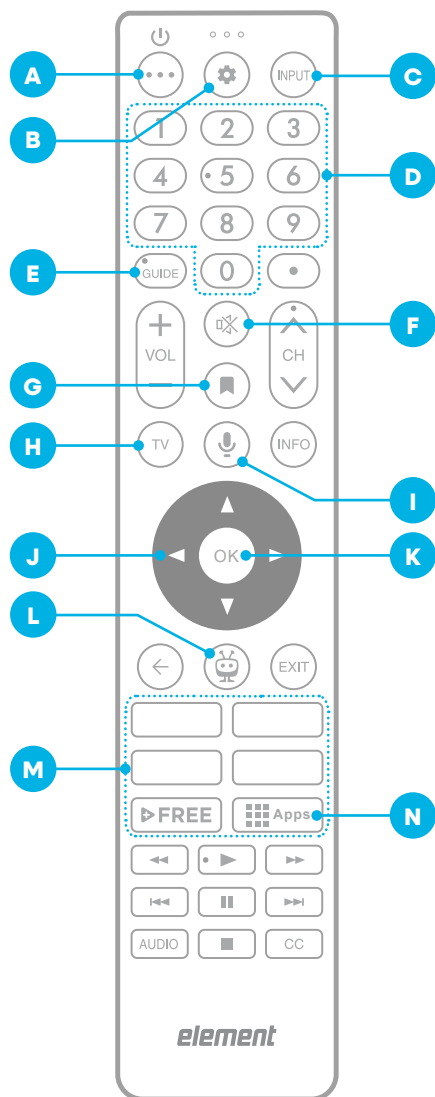

- A Power** Turn your TV on/off
- B Settings** View TV settings
- C Input** Change your TV's input
- D Number pad** Change channels and input pins
- E Guide** Brings up Live TV Guide when enabled
- F Mute** Silence your TV's audio
- G Watchlist** Brings up your Watchlist
- H TV** Brings up Live TV Input
- I Voice control** Navigate your device and find something
- J Navigation pad** Move up, down, left or right
- K OK** select an item
- L Home** Return to the Home screen or wake your TV
- M App Shortcuts** Launch specific apps
- N All Apps** View all apps


Connecting an Antenna

With the built-in tuner you can connect your TV to an antenna and enjoy over-the-air entertainment.

1. To connect your TV to an antenna, connect a coax cable (not included) into your TV's **ANT** port and the other end into your device.
2. Turn your TV on and press the Home button on your remote.
3. Press the  button on your remote and **Scan for channels**.
4. Follow the on-screen instructions.

Universal Remote Setup

If you prefer to use your cable set-top box or satellite receiver remote as a universal remote, please refer to the manual your cable or satellite service provided. It includes instructions on how to program your remote to the TV.

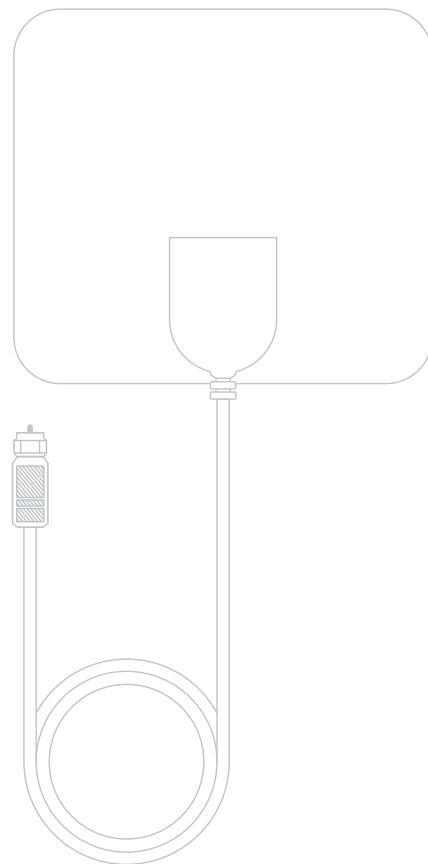

Let's Register Your Product



To register and activate your 2-year warranty, scan the QR code or visit elementelectronics.com/register

Why Should I Register?

Without product registration within 90 days of purchase, your product only receives a 1-year limited warranty.




Support

Get assistance quickly when you need it by pre-registering



News & Offers

Get the latest news and offers

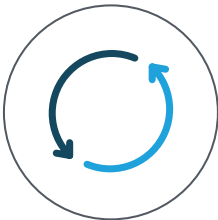

Updates

Stay current with important product updates and notifications

We're Here to Help

Find resources and get help with product setup, connecting devices, technical issues, downloading manuals and more.

We're available 24 hours a day, 7 days a week

- elementelectronics.com
- [1.888.842.3577](tel:18888423577)
- customerservice@elementelectronics.com

To find solutions to common issues for Tivo, visit www.tivo.com/support

We recommend keeping your TV box for the duration of your warranty.
See your product warranty for details.

This page left intentionally blank.

This page left intentionally blank.

element[®]

Element and the Element Logo are trademarks of Element Brand Holding, LLC. ©2025 Element Brand Holding, LLC. All Rights Reserved.
© 2025 Xperi Inc. All Rights Reserved. TiVo and the TiVo logo are trademark(s) or registered trademark(s) of Xperi Inc. or its subsidiaries
in the United States and other countries. All other trademarks and content are the property of their respective owners.